

AP Series Pure Sine Wave Inverter/Charger User's Manual


Version 4.0



Table of Contents

1. Important Safety Information	3
1-1. General Safety Precautions.....	3
1-2. Precautions When Working with Batteries	3
2-1. General Information	4
2-2. Application.....	4
2.3 Mechanical Drawing	5
2-4. Features.....	9
2.5 Electrical Performance.....	9
2.5.1 Invert	9
2.5.2 AC Charger	9
2.5.3 Transfer	12
2.5.4 Auto frequency adjust	13
2.5.5 Solar Charger*	13
2.5.6 Automatic Voltage Regulation*	15
2.5.7 Power Saver	16
2.5.8 Protections.....	18
2.5.9 Remote control.....	18
2.5.10 LED Indicator & LCD	19
2.5.11 Audible Alarm	21
2.5.12 FAN Operation.....	21
2.5.13 DIP Switches.....	22
2.5.14 Other features.....	23
3 Installation.....	25
3.1 Location	25
3.2 DC Wiring.....	25
3.3 AC Wiring.....	26
3.4 Grounding	27
3.5 Install Flange.....	28
4 Troubleshooting Guide	30
5 Warranty	32
Appendix 1.....	33

1. Important Safety Information

 **WARNING!** Before using the Inverter, you need to read and save the safety instructions.

1-1. General Safety Precautions

1-1-1. Do not expose the Inverter to rain, snow, spray, bilge or dust. To reduce risk of hazard, do not cover or obstruct the ventilation openings. Do not install the Inverter in a zero-clearance compartment. Overheating may result. Allow at least 30CM(11.81 inches) of clearance around the inverter for air flow. Make sure that the air can circulate freely around the unit. A minimum air flow of 145CFM is required.

1-1-2. To avoid a risk of fire and electronic shock. Make sure that existing wiring is in good electrical condition; and that wire size is not undersized. Do not operate the Inverter with damaged or substandard wiring.

1-1-3. This equipment contains components which can produce arcs or sparks. To prevent fire or explosion do not install in compartments containing batteries or flammable materials or in locations which require ignition protected equipment. This includes any space containing gasoline-powered machinery, fuel tanks, or joints, fittings, or other connection between components of the fuel system.

See Warranty for instructions on obtaining service.

1-1-4. Do not disassemble the Inverter/Charger. It contains no userserviceable parts. Attempting to service the Inverter/Charger yourself may result in a risk of electrical shock or fire. Internal capacitors remain charged after all power is disconnected.

1-1-5. To reduce the risk of electrical shock, disconnect both AC and DC power from the Inverter/Charger before attempting any maintenance or cleaning. Turning off controls will not reduce this risk

CAUTION: Equipment damage

The output side of the inverter's AC wiring should at no time be connected to public power or a generator. This condition is far worse than a short circuit. If the unit survives this condition, it will shut down until corrections are made.

Installation should ensure that the inverter's AC output is, at no time, connected to its AC input.

Warning: Limitations On Use

SPECIFICALLY, PLEASE NOTE THAT THE APC SERIES INVERTER/CHARGER SHOULD NOT BE USED IN CONNECTION WITH LIFE SUPPORT SYSTEMS OR OTHER MEDICAL EQUIPMENT OR DEVICES.

1-2. Precautions When Working with Batteries

1-2-1. If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters eye, immediately flood eye with running cold water for at least 20 minutes and get medical attention immediately.

1-2-2. Never smoke or allow a spark or flame in vicinity of battery or engine.

1-2-3. Do not drop a metal tool on the battery. The resulting spark or short-circuit on the battery or other electrical part may cause an explosion.

1-2-4. Remove personal metal items such as rings, bracelets, necklaces, and watches when working with a lead-acid battery. A lead-acid battery produces a short-circuit current high enough to weld a ring or the like to metal, causing a severe burn.

1-2-5. To reduce the risk of injury, charge only rechargeable batteries such as deep-cycle lead acid, lead antimony, lead calcium gel cell, absorbed mat, NiCad/NiFe or Lithium battery. Other types of batteries may burst, causing personal injury and damage.

2. Introduction

2-1. General Information

APC Series Pure Sine Wave Inverter is a combination of an inverter, battery charger and AC auto-transfer switch into one complete system with a peak conversion efficiency of 88%.

It is packed with unique features and it is one of the most advanced inverter/chargers in the market today. It features power factor corrected, sophisticated multi-stage charging and pure sine wave output with unprecedentedly high surge capability to meet demanding power needs of inductive loads without endangering the equipment.

For the regular model, when utility AC power cuts off(or falls out of acceptable range), the transfer relay is de-energized and the load is automatically transferred to the Inverter output. Once the qualified AC utility is restored, the relay is energized and the load is automatically reconnected to AC utility.

The APC Series Inverter is equipped with a powerful charger of up to 90Amps (depending on model). The overload capacity is 300% of continuous output for up to 20 seconds to reliably support tools and equipment longer

Another important feature is that the inverter can be easily customized to Battery priority via a DIP switch, this helps to extract maximum power from battery in renewable energy systems.

Thus, the APC Series Pure Sine Wave Inverter is suitable for Renewable energy system, Utility, RV, Marine and Emergency appliances.

To get the most out of the power inverter, it must be installed, used and maintained properly. Please read the instructions in this manual before installing and operating.

2-2. Application

Power tools—circular saws, drills, grinders, sanders, buffers, weed and hedge trimmers, air compressors.

Office equipment – computers, printers, monitors, facsimile machines, scanners.

Household items – vacuum cleaners, fans, fluorescent and incandescent lights, shavers, sewing machines.


Kitchen appliances – coffee makers, blenders, ice makers, toasters.

Industrial equipment – metal halide lamp, high – pressure sodium lamp.



Home entertainment electronics – television, VCRs, video games, stereos, musical instruments, satellite equipment.

2.3 Mechanical Drawing



APC/APS 1KW to 3KW Models

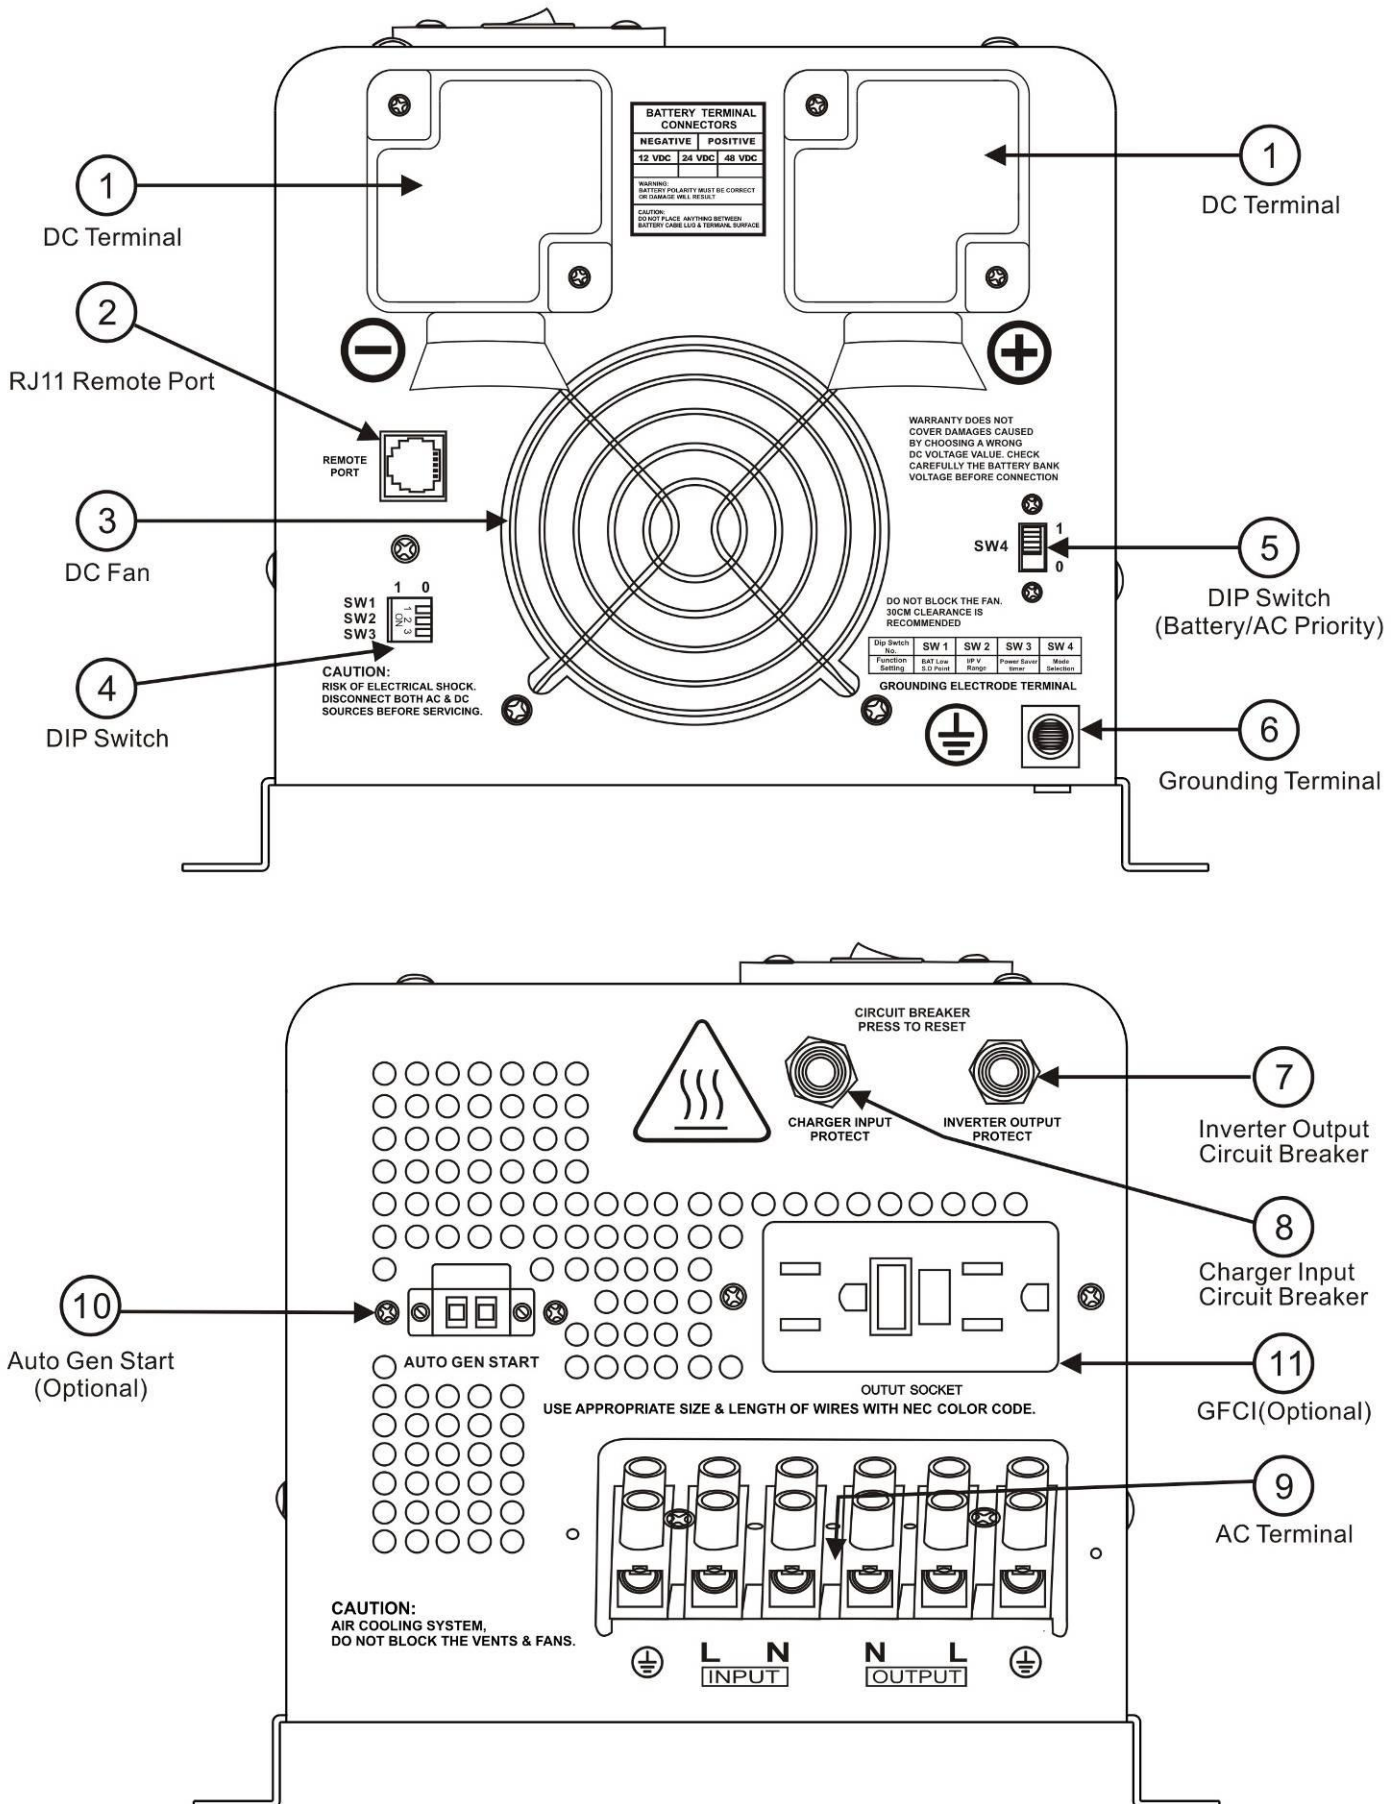


APC/APS 4KW to 6KW Models

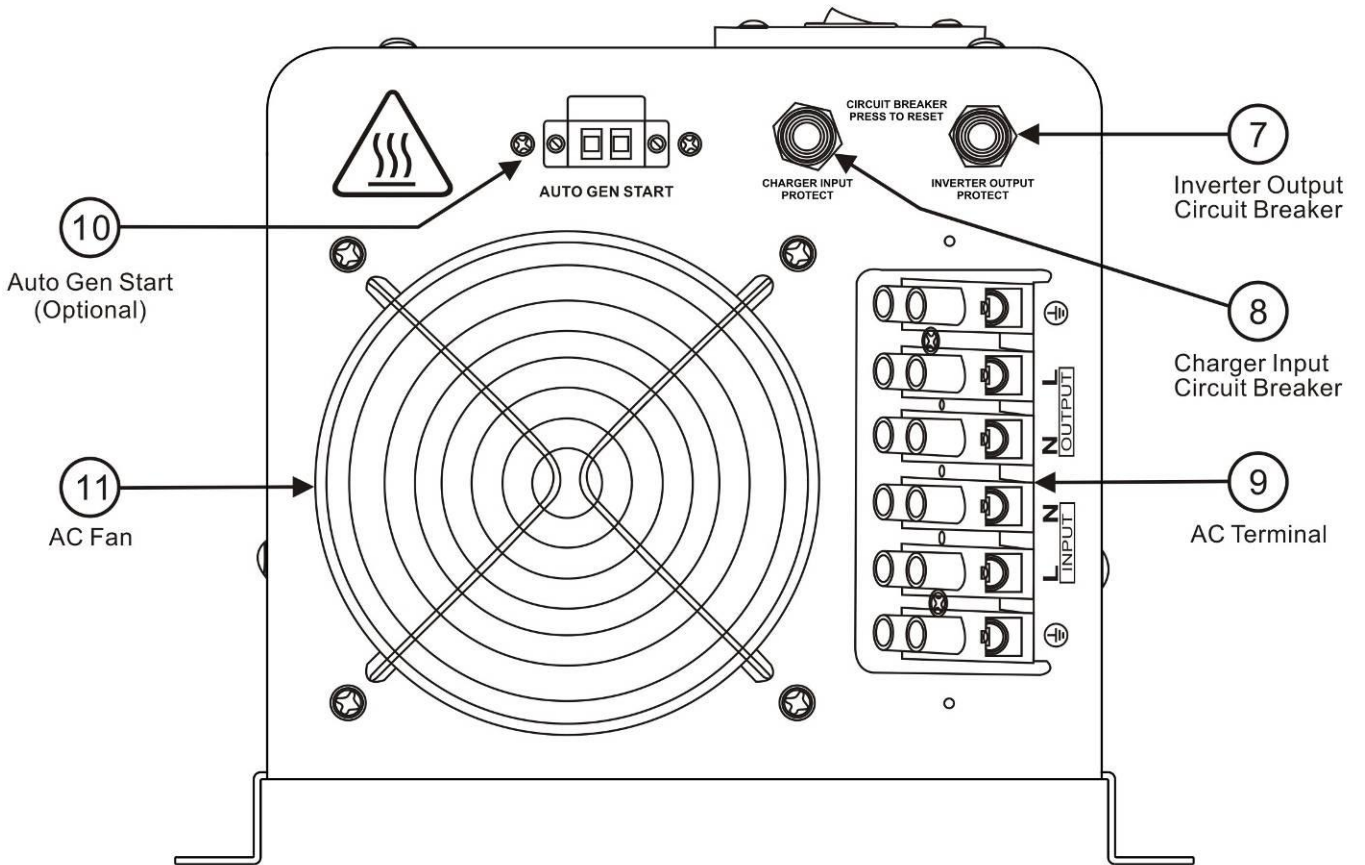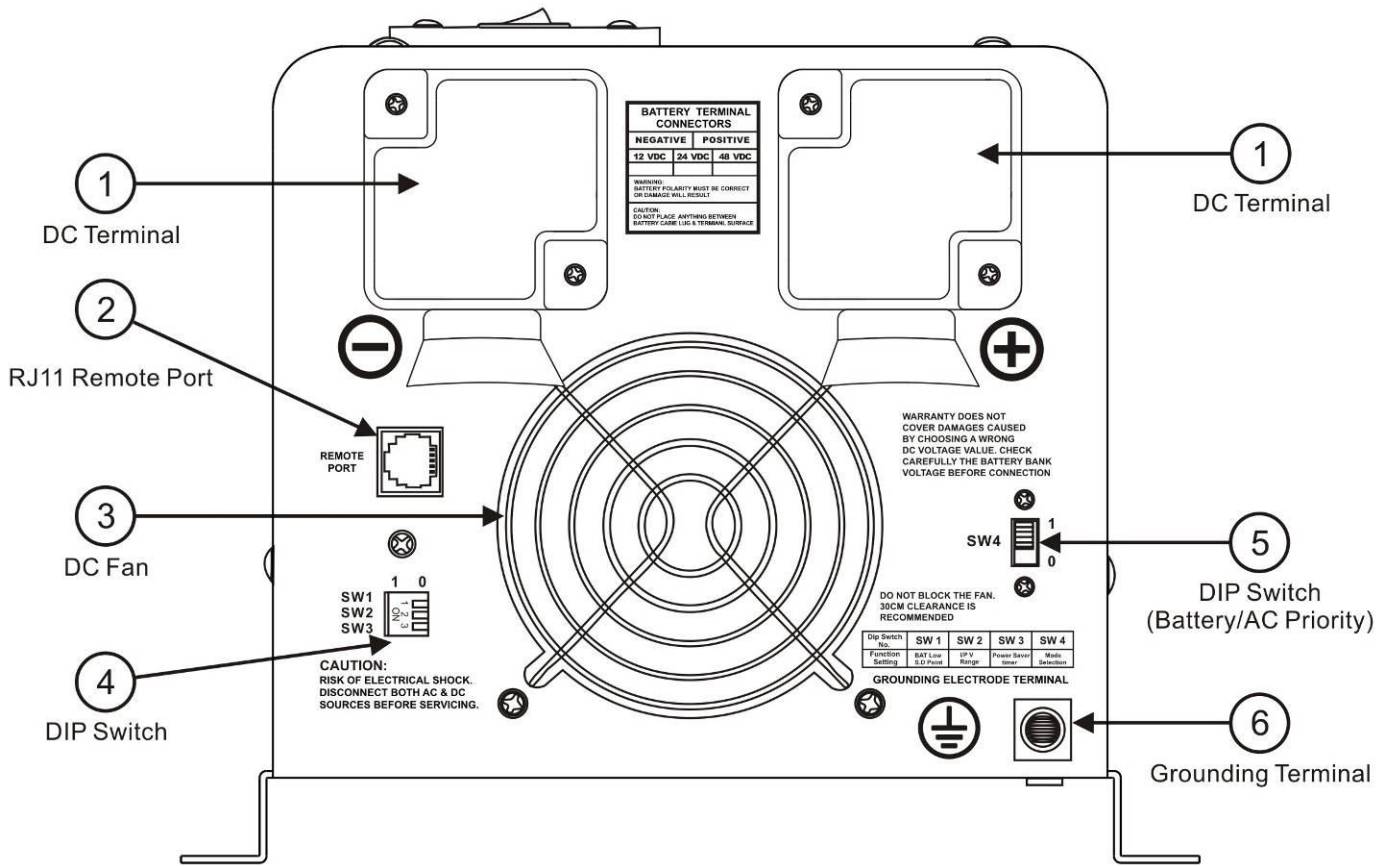

APV 1KW to 3KW Models

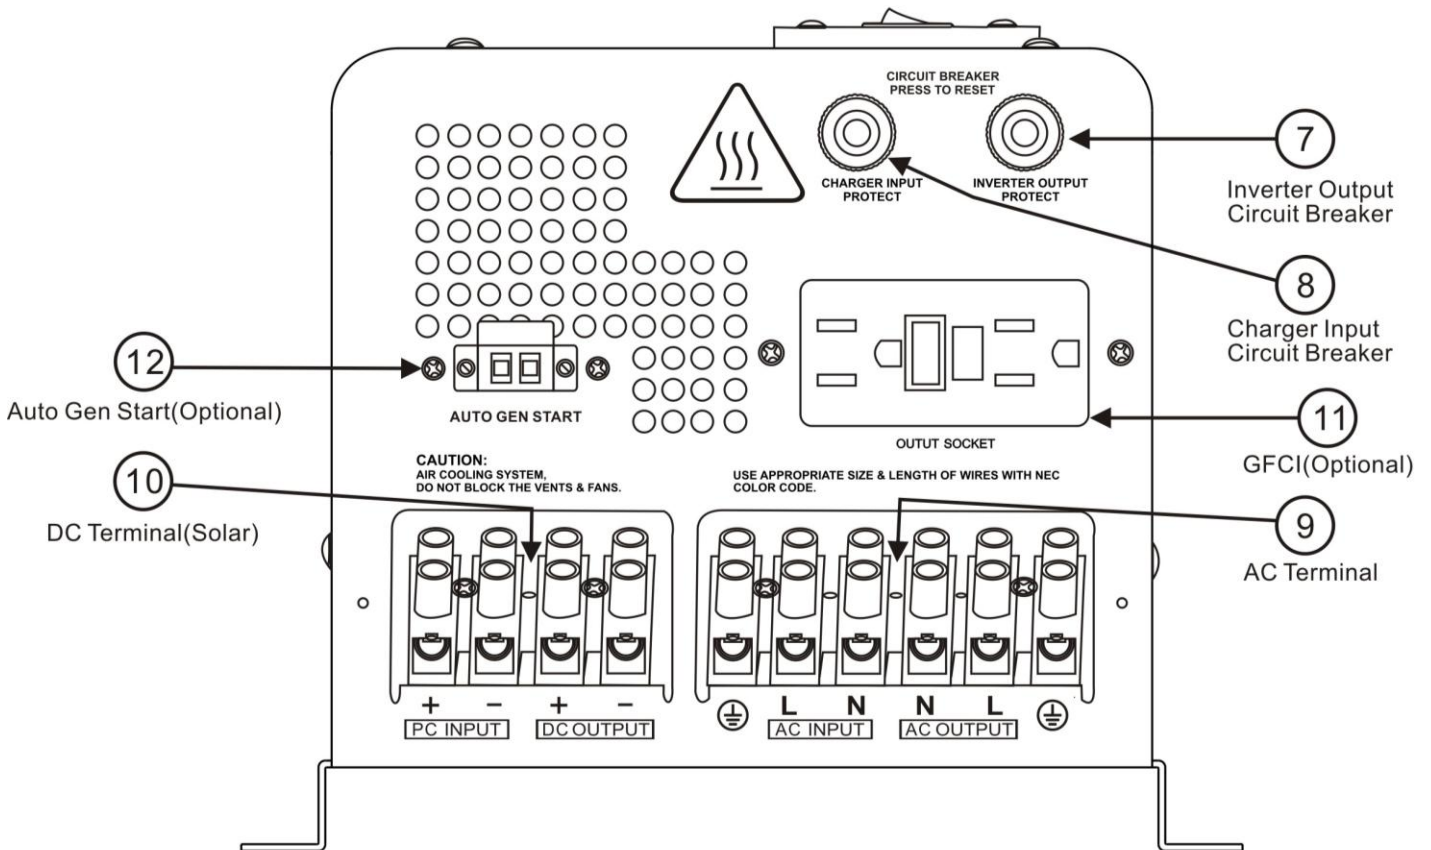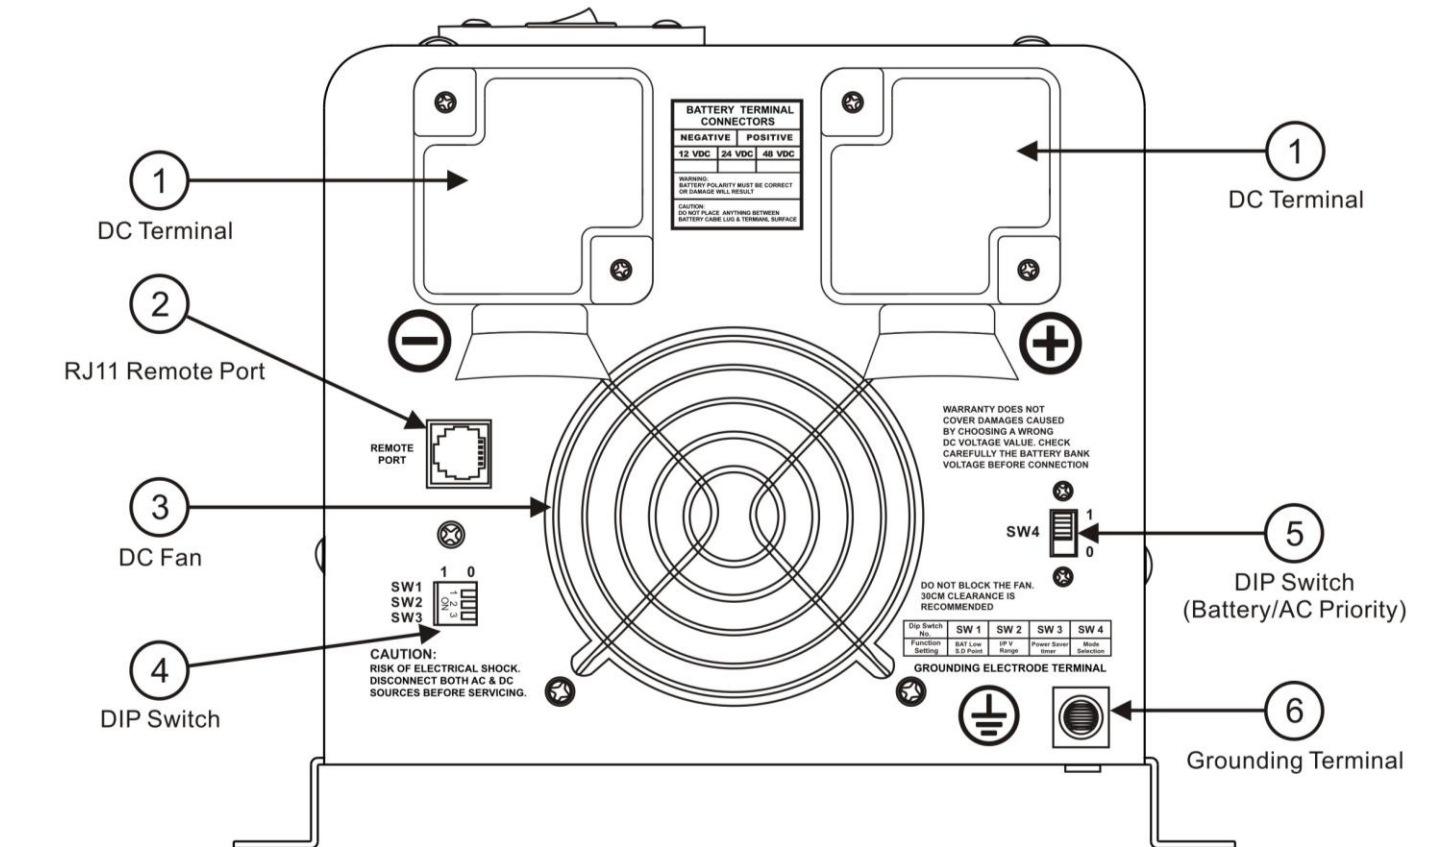

APV 4KW to 6KW Models

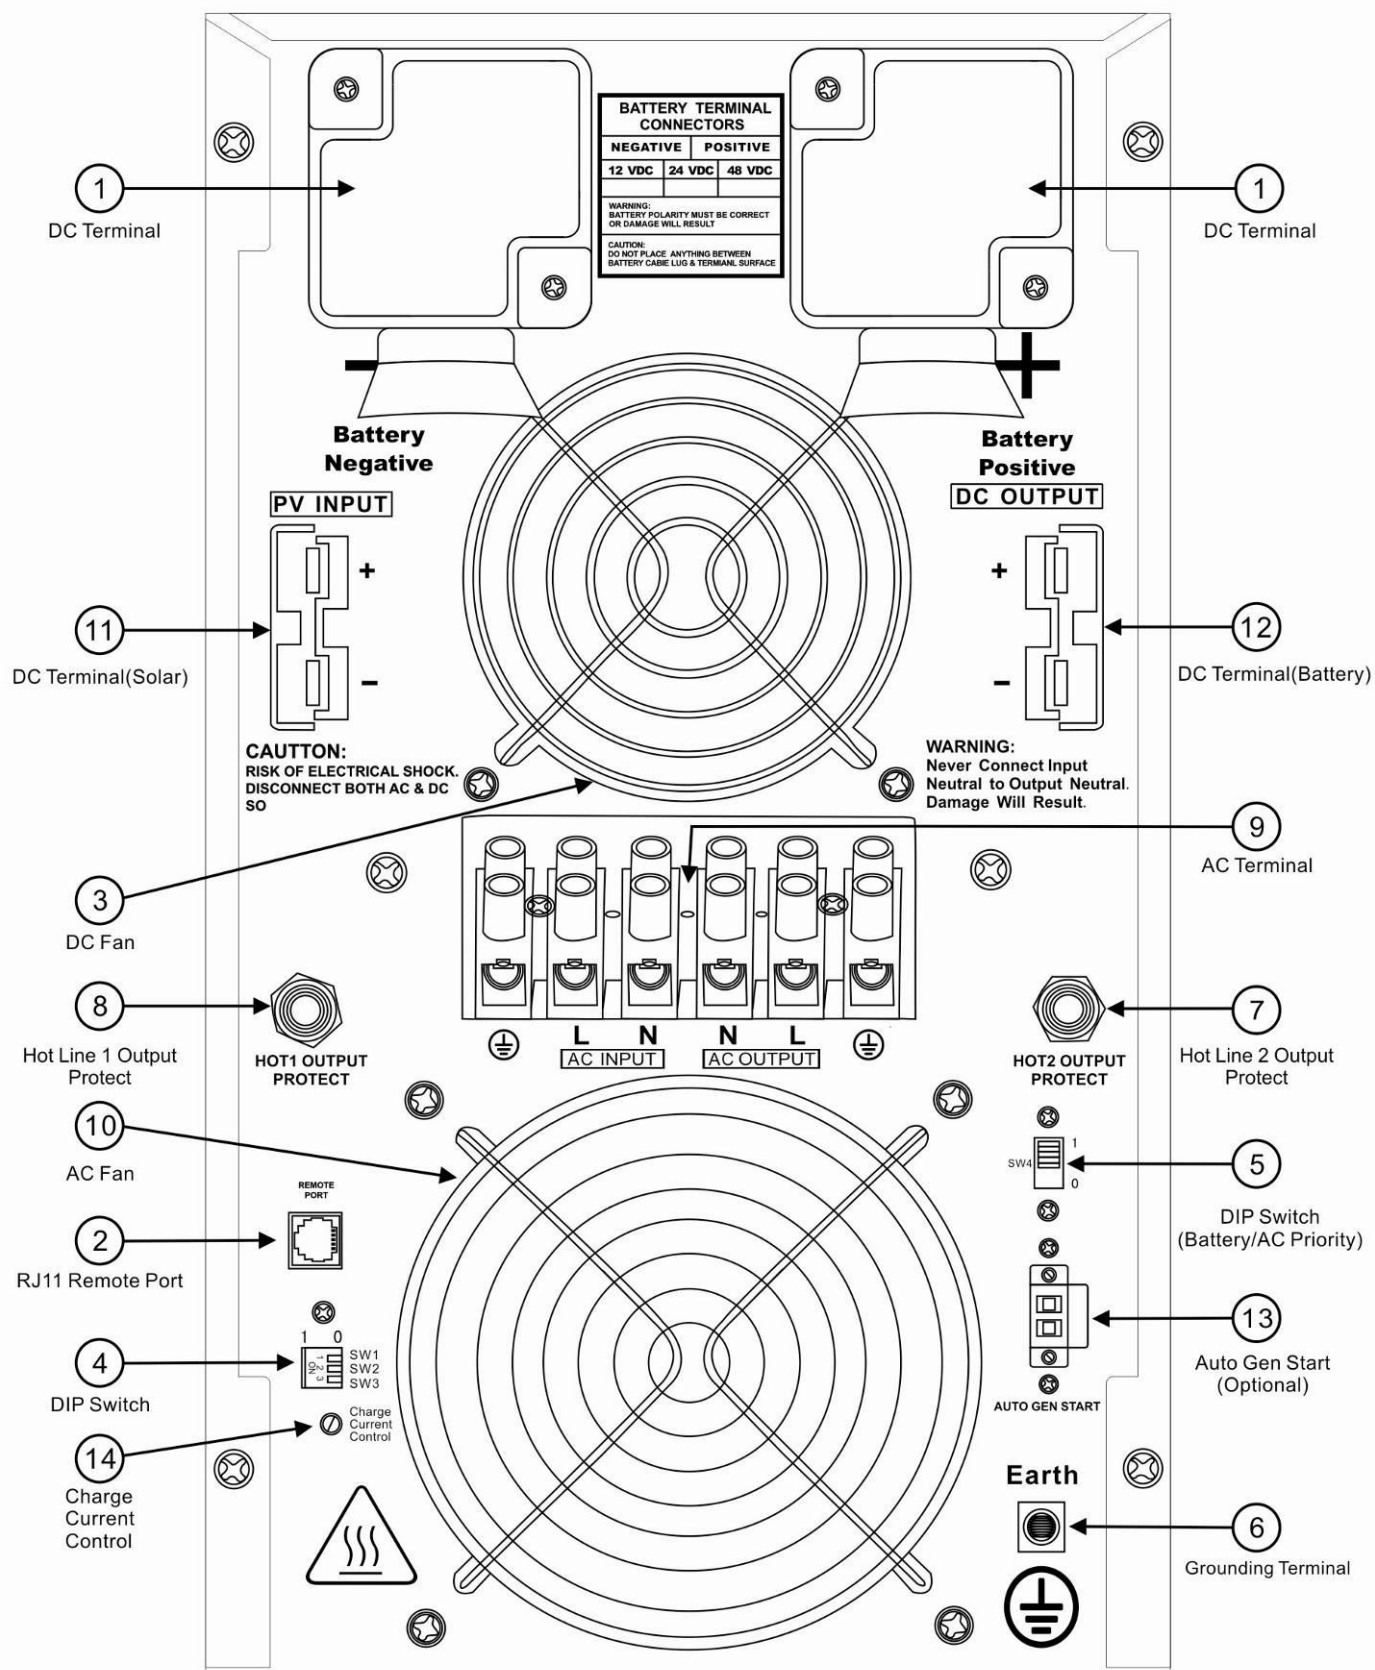

2-4. Features

High overload ability up to 300% of rated power(20 sec)
 Low quiescent current, low power “ Power Saving Mode ” to conserve energy
 4-step intelligent battery charging, PFC(Power Factor Correction) for charger
 8 pre set battery type selector plus de-sulphation for totally flat batteries
 Powerful charge rate up to 90Amp, selectable from 0%-100%
 10 ms typical transfer time between battery and AC, guarantees power continuity
 Smart remote control
 15s delay before transfer when AC resumes, extra protection for loads when used with generator
 Allows start up and through power with depleted batteries
 30A/40A through current ability
 Multiple controlled cooling fan
 Extensive protections against various harsh situations
 13VDC battery recover point, dedicated for renewable energy systems

2.5 Electrical Performance

2.5.1 Invert

Topology

The APC inverter/charger is built according to the following topology.

Invert: Full Bridge Topology.

Charge: Isolate Boost Topology

Because of high efficiency Mosfets and 16bit, 4.9MHZ microprocessor and heavy transformers, it outputs PURE SINE WAVE AC with an average THD of 15% (min 5%, max 25%) depending of load connected and battery voltage.

The peak efficiency of APC series is 88%.

Overload Capacity

The APC series inverters have different overload capacities, making it ideal to handle demanding loads.

1 For $110% < \text{Load} < 125% (\pm 10\%)$, no audible alarm in 14 minutes, beeps 0.5s every 1s in the 15th minute, and Fault(Turn off) after the 15th minute.

2 For $125% < \text{Load} < 150% (\pm 10\%)$, beeps 0.5s every 1s and Fault(Turn off) after the 1 minute.

3 For $300\% \cong \text{Load} > 150% (\pm 10\%)$, beeps 0.5s every 1s and Fault(Turn off) after 20s.

Caution:

After the inverter is switched on, it takes a finite time for it to self diagnose and get ready to deliver full power. Hence, always switch on the load(s) after a few seconds of switching on the inverter. Avoid switching on the inverter with the load already switched on. This may prematurely trigger the overload protection. When a load is switched on, it may require initial higher power surge to start. Hence, if multiple loads are being powered, they should be switched on one by one so that the inverter is not overloaded by the higher starting surge if all the loads are switched on at once.

2.5.2 AC Charger


APC Series is equipped with an active PFC (Power Factor Corrected) multistage battery charger. The PFC

feature is used to control the amount of power used to charge the batteries in order to obtain a power factor as close as possible to 1.

Unlike other inverters whose max charging current decreases according to the input AC voltage, APC series charger is able to output max current as long as input AC voltage is in the range of 164-243VAC(95-127VAC for 120V model), and AC freq is in the range of 48-54Hz(58-64Hz for 60Hz model).

The APC series inverter has a very rapid charge current available, and the max charge current can be adjusted from 0%-100% via a liner switch to the right of the battery type selector. This will be helpful if you are using our powerful charger on a small capacity battery bank.

Choosing "0" in the battery type selector will disable charging function.

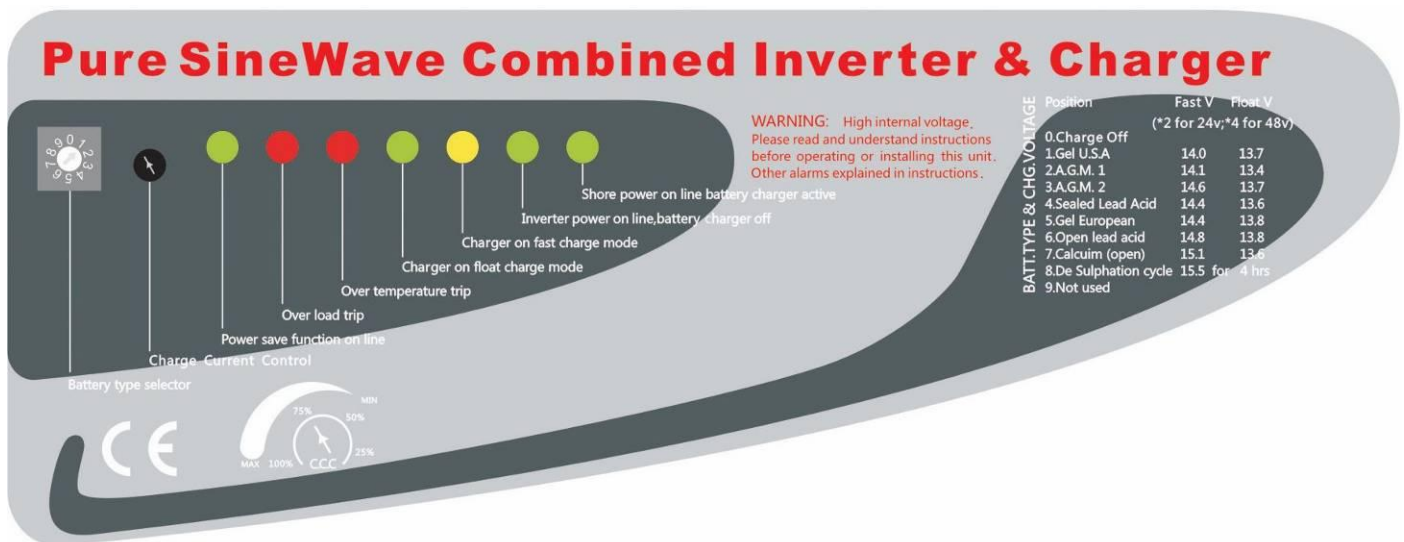

There are 3 main stages:

Bulk Charging: This is the initial stage of charging. While Bulk Charging, the charger supplies the battery with controlled constant current. The charger will remain in Bulk charge until the Absorption charge voltage (determined by the Battery Type selection) is achieved.

Software timer will measure the time from A/C start until the battery charger reaches 0.3V below the boost voltage, then take this time as T_0 and $T_0 \times 10 = T_1$.

Absorb Charging: This is the second charging stage and begins after the absorb voltage has been reached. Absorb Charging provides the batteries with a constant voltage and reduces the DC charging current in order to maintain the absorb voltage setting.


In this period, the inverter will start a T_1 timer; the charger will keep the boost voltage in Boost CV mode until the T_1 timer has run out. Then drop the voltage down to the float voltage. The timer has a minimum time of 1 hour and a maximum time of 12 hours.

Float Charging: The third charging stage occurs at the end of the Absorb Charging time. While Float charging, the charge voltage is reduced to the float charge voltage (determined by the Battery Type selection*). In this stage, the batteries are kept fully charged and ready if needed by the inverter.

If the A/C is reconnected or the battery voltage drops below 12Vdc/24Vdc/48Vdc, the charger will reset the cycle above.

If the charge maintains the float state for 10 days, the charger will deliberately reset the cycle to protect the battery.

Battery Charging Processes

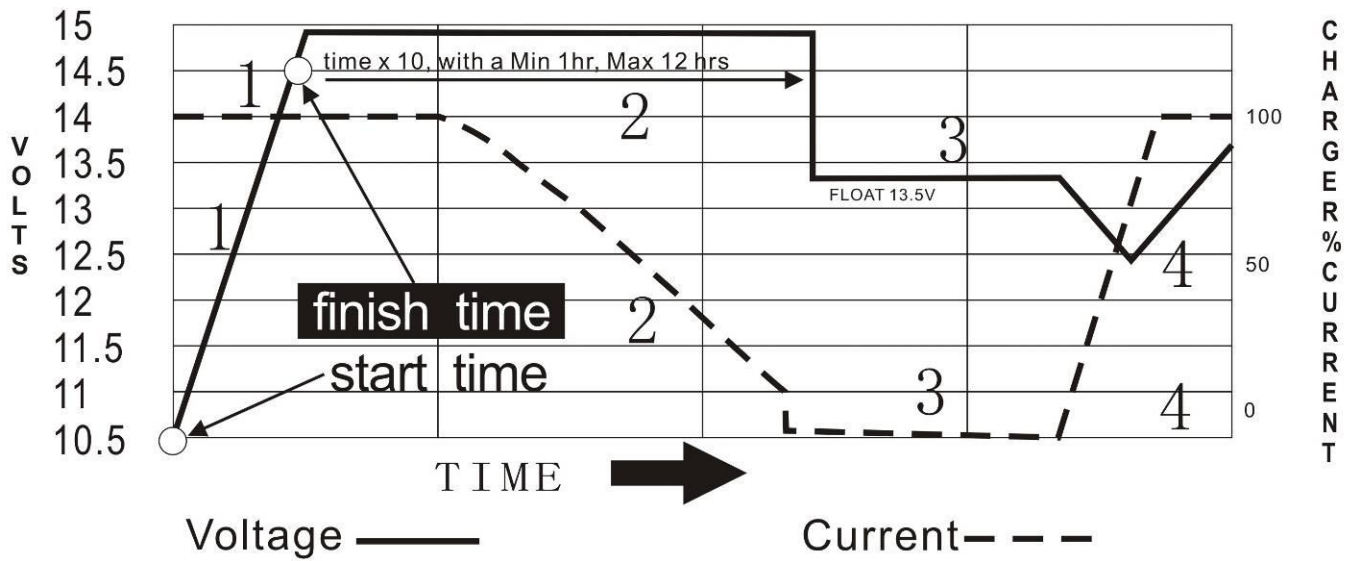

THE NEW BATTERY CHARGERS AND BOOSTERS OFFER THE FASTEST CHARGE RATE CURRENTLY AVAILABLE

STEP 1= Bulk Charge (Constant Current)
STEP 3= Float Voltage

STEP 2 = Absorption (Constant Voltage)
STEP 4 = RESET TO STEP 1

*2 FOR 24 VOLTS
*4 FOR 48 VOLTS

ADJUSTABLE TIME DEPENDING ON BATTERY BANK CAPACITY

Battery type selector

Switch setting	Description	Boost / Vdc	Float / Vdc
0	Charger Off		
1	Gel USA	14.0	13.7
2	AGM 1	14.1	13.4
3	AGM 2	14.6	13.7
4	Sealed lead acid	14.4	13.6
5	Gel EURO	14.4	13.8
6	Open lead acid	14.8	13.3
7	Calcium	15.1	13.6
8	De sulphation	15.5 (4 Hours then Off)	
9	Not used		

12Vdc Mode (*2 for 24Vdc ; *4 for 48Vdc)

De-sulphation

The de-sulphation cycle on switch position 8 is marked in red because this is a very dangerous setting if you do not know what you are doing. Before ever attempting to use this cycle you must clearly understand what it does and when and how you would use it.

What causes sulphation? This can occur with infrequent use of the batteries, nor if the batteries have been left discharged so low that they will not accept a charge. This cycle is a very high voltage charge cycle designed to try to break down the sulphated crust that is preventing the plates from taking a charge and thus allow the plates to clean up and accept a charge once again.

Charging depleted batteries

The APC series inverter allows start up and through power with depleted batteries.

For 12VDC model, after the battery voltage goes below 10V, if the switch is still (and always) kept in "ON" position, the inverter is always connected with battery, and the battery voltage doesn't drop below 2V, the inverter will be able to charge the battery once qualified AC inputs.

Before the battery voltage going below 9VDC, the charging can activated when the switch is turned to "Off", then to "ON".

When the voltage goes below 9VDC, and you accidentally turn the switch to OFF or disconnect the inverter from battery, the inverter will not be able to charge the battery once again, because the CPU lose memory during this process.

Start up without battery function can be customized upon request.

Charging current for each model

Model	Current	Model	Current
1KW12Vdc230Vac	35 ±5A	1KW12Vdc120Vac	35 ±5A
1KW24Vdc230Vac	20 ±5A	1KW24Vdc120Vac	15 ±5A
1.5KW12Vdc230Vac	45 ±5A	1.5KW12Vdc120Vac	45 ±5A
1.5KW24Vdc230Vac	25 ±5A	1.5KW24Vdc120Vac	25 ±5A
2KW12Vdc230Vac	65 ±5A	2KW12Vdc120Vac	60 ±5A
2KW24Vdc230Vac	30 ±5A	2KW24Vdc120Vac	30 ±5A
2KW48Vdc230Vac	20 ±5A	2KW48Vdc120Vac	15 ±5A
3KW12Vdc230Vac	80 ±5A	3KW12Vdc120Vac	80 ±5A
3KW24Vdc230Vac	45 ±5A	3KW24Vdc120Vac	40 ±5A
3KW48Vdc230Vac	30 ±5A	3KW48Vdc120Vac	25 ±5A
4KW12Vdc230Vac	105 ±5A	4KW12Vdc120Vac	100 ±5A
4KW24Vdc230Vac	65 ±5A	4KW24Vdc120Vac	50 ±5A
4KW48Vdc230Vac	35 ±5A	4KW48Vdc120Vac	30 ±5A
5KW24Vdc230Vac	70 ±5A		
5KW24Vdc230Vac(Split Phase)			
5KW48Vdc230Vac	40 ±5A		
5KW48Vdc230Vac(Split Phase)			
6KW24Vdc230Vac	85 ±5A		
6KW24Vdc230Vac(Split Phase)			
6KW48Vdc230Vac	55 ±5A		
6KW48Vdc230Vac(Split Phase)			

The charging capacity will go to peak in around 3 seconds, this may probably cause a generator to drop frequency, making inverter transfer to battery mode.

It is suggested to gradually put charging load on the generator by switching the charging switch from min to max, together with the 15s switch delay, our inverter gives the generator enough time to spin up.



Caution:

Pls turn the charge current control switch gently to avoid breakage due to over-turning.

2.5.3 Transfer

While in the Standby Mode, the AC input is continually monitored. Whenever AC power falls below the VAC Trip voltage (154 VAC, default setting), the inverter automatically transfers back to the Invert Mode with minimum interruption to your appliances - as long as the inverter is turned on. The transfer from Standby mode to Inverter mode occurs in approximately 10 milliseconds. And it is the same time from Inverter mode to Standby mode.

Though it is not designed as a computer UPS system, this transfer time is usually fast enough to hold them up.

There is a 15-second delay from the time the inverter senses that continuously qualified AC is present at the input terminals to when the transfer is made. This delay is built in to provide time for a generator to spin-up to a stable voltage and avoid relay chattering. The inverter will not transfer to generator until it has locked onto the generator's output. This delay is also designed to avoid frequent switch when input utility is unstable.

2.5.4 Auto frequency adjust

The inverter is designed with Auto Frequency adjust function.

The factory default configuration for 220/230/240VAC inverter is 50Hz and 60Hz for 100/110/120VAC inverter.

While the output freq can be easily changed once a qualified freq is applied to the inverter.

If you want to get 60Hz from a 50Hz inverter, just input 60Hz power, and the inverter will automatically adjust the output freq to 60Hz and vice versa.

NOTE: The inverter will output factory set freq after it restarts. Customers who can only accept one freq should specify the freq when ordering.

2.5.5 Solar Charger*

For APV series, there is a solar charger built in.

Listed below is the spec for solar charger

Table 1 Electrical Specifications @ 25°C (77°F)

Rated Voltage	12 Vdc	24Vdc
Rated charge current (includes load current)	60Amp	
Load current	15Amp	
Input voltage range	15-30Vdc	30-55Vdc
Max DC input Current	60Amp	
Max. PV open circuit array voltage	30Vdc	55Vdc
Overload protection (DC load)	2.0 * I(Rated)>5s 1.5 * I(Rated) >20s 1.25 * I(Rated) temperature controlled	
Typical idle consumption	At idle < 10mA	
Bulk charge	14.6Vdc (default)	29.2Vdc (default)
Floating charge	13.4Vdc (default)	26.8Vdc (default)
Equalization charge	14.0Vdc (default)	28.0Vdc (default)

Over charge disconnect	14.8Vdc	29.6Vdc
Over charge recovery	13.6Vdc	27.2Vdc
Over discharge disconnect	10.8Vdc (default)	21.6Vdc (default)
Over discharge reconnect	12.3Vdc	24.6Vdc
Lead acid battery settings	Adjustable	
NiCad battery settings	Adjustable	
Low voltage reconnect	12.0-14.0Vdc	24.0-28.0Vdc
Low voltage disconnect	10.5-12.5Vdc	21.0-25.0Vdc
Ambient temperature	0-40°C (32-104°F) full capacity; 40-60°C (104-140°F) de-rating	
Altitude	Operating 5000 m, Non-Operating 16000 m	
Protection class	IP21	
Terminal size (fine/single wire)	#8 AWG	

Maximum Power Point Tracking (MPPT) Function

Maximum Power Point Tracking, frequently referred to as MPPT, is an electronic system that operates the Photovoltaic (PV) modules in a manner that allows the modules to produce all the power they are capable of.

The PV-seeker Charge controller is a microprocessor-based system designed to implement the MPPT. And it can increase charge current up to 30% or more compared to traditional charge controllers (see figure 1).

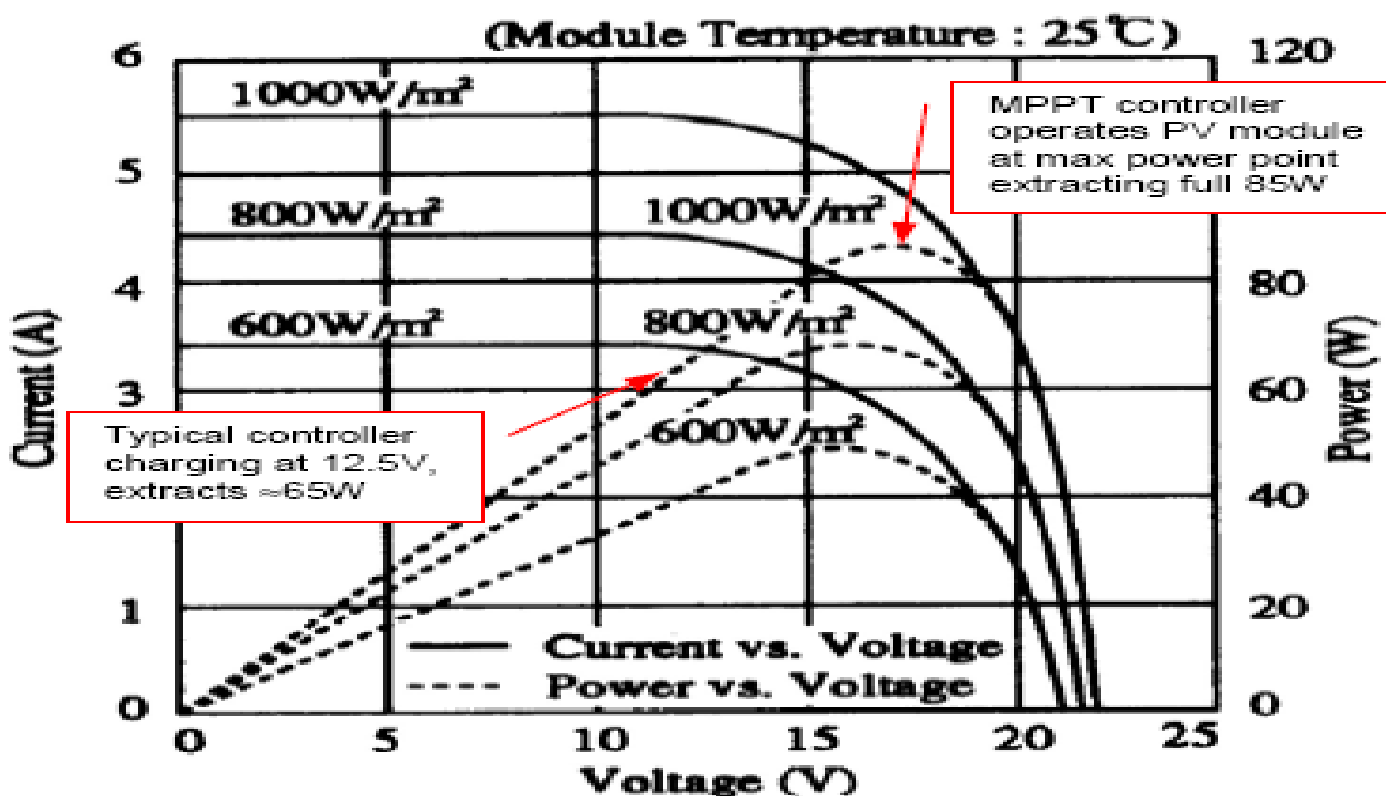


Figure 1 Current, Power vs. Voltage Characteristics

The Charge controller built in is with 12/24V battery voltage auto detecting function.

For 12VDC inverter, the output voltage of solar charger will be accordingly 12VDC, and the qualified DC input volt range is 15v-30VDC.

For 24VDC inverter, the output voltage of solar charger will be accordingly 24VDC, and the qualified DC input volt range is 30V-55VDC.

If the voltage falls out of this range, the charger will not work properly. Special attention should be paid to this when configuring the solar array.

2.5.6 Automatic Voltage Regulation*


The automatic voltage regulation function is only for APS Pure Sine Wave Inverter/ Charger which is a combination of APC inverter and Automatic Voltage Regulator.

Instead of simply bypassing the input AC to power the loads, the APS series inverter stabilizes the input AC voltage to a range of 230V/120V ± 10%.

Connected with batteries, the APS inverter will function as a UPS with max transfer time of 10 ms.

With all the unique features from the inverter and AVR, it brings you long-term trouble free operation beyond your expectation.

APS Series AVR Function Introduction

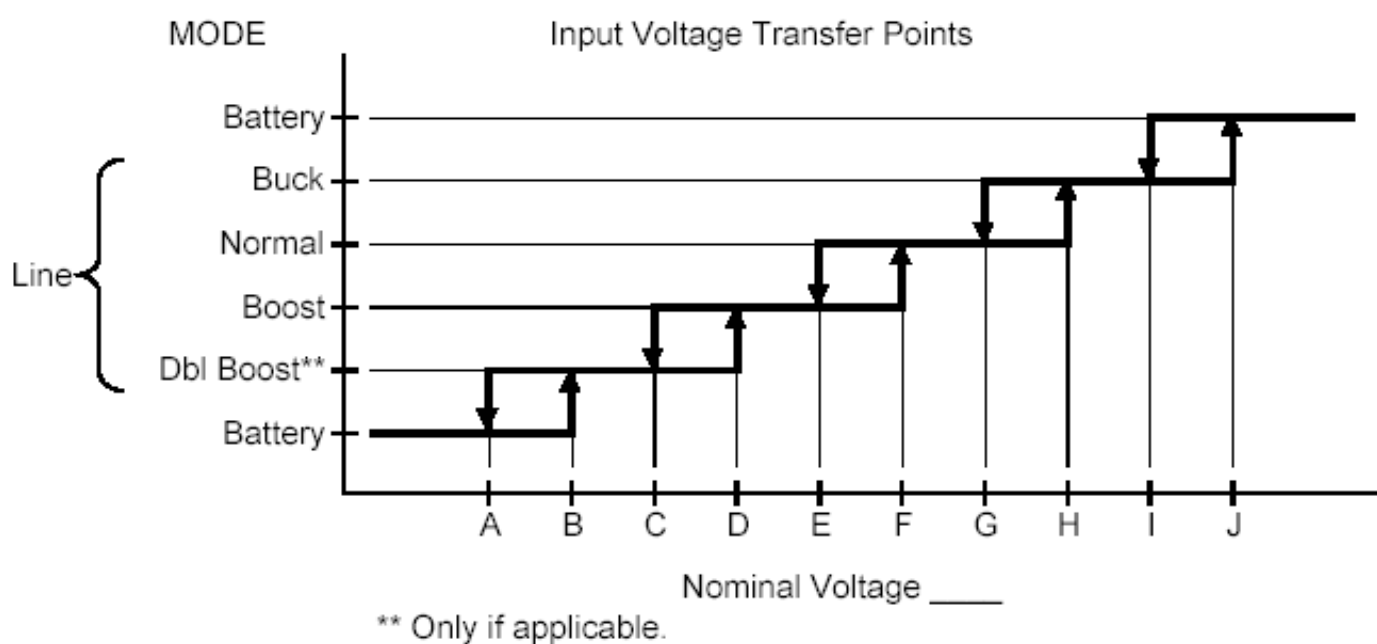

Any-Power Solution AVR Function	Any-Power Solution Series					
	LV (NA/JPN)			HV (INTL)		
Acceptable Input Voltage Range (Vac)	0-160			0-300		
Nominal Input Voltages (Vac)	100	110	120	220	230	240
(A) Line low loss N/W (On battery)	75/65	84/72	92/78	168/143	176/150	183/156
(B) Line Low comeback N/W (On Boost)	80/70	89/77	97/83	178/153	186/160	193/166
(C) Line 2nd boost threshold (On Boost)	**	**	**	**	**	**
(D) Line 2nd boost comeback (On normal)	**	**	**	**	**	**
(E) Line 1st boost threshold (On Boost)	90	99	108	198	207	216

(F) Line 1st boost comeback (On normal)	93	103	112	205	215	225
(G) Line buck comeback (On Normal)	106	118	128	235	246	256
(H) Line buck threshold (On Buck)	110	121	132	242	253	264
(I) Line high comeback (On Buck)	115	127	139	253	266	278
(J) Line high loss (On Battery)	120	132	144	263	276	288

2.5.7 Power Saver

There are 2 different working statuses for APC inverter: “Power On” and “Power Off”.

When power switch is in “Unit Off” position, the inverter is powered off.

When power switch is turned to either of “Power Saver Auto” or “Power Saver Off”, the inverter is powered on.

Power saver function is to dedicated to conserve battery power when AC power is not or little required by the loads.

In this mode, the inverter pulses the AC output looking for an AC load (i.e., electrical appliance).

Whenever an AC load (greater than 25 watts) is turned on, the inverter recognizes the need for power and automatically starts inverting and output goes to full voltage. When there is no load (or less than 25 watts) detected, the inverter automatically goes back into search mode to minimize energy consumption from the battery bank.

In “Power saver on” mode, the inverter will draw power mainly in sensing moments, thus the idle consumption is significantly reduced.

The inverter is factory defaulted to detect load for 250ms in every 30 seconds. This cycle can be customized to 3 seconds thru the SW3 on DIP switch.



Note: The minimum power of a load to take inverter out of sleep mode (Power Saver On) is 25 Watts.

The whole AP Series inverter is designed with extraordinarily low idle power consumption which is 0.8-1.8% of its rated power.

AP Series Idle Power Consumption(in Watts)

Model NO	Power Saver Off	Power Saver On (3Secs)	Power Saver On (30Secs)
1012E	12.5	7.5	5.3
1012	12.5	7.5	5.3
1024E	15	8.4	5.4
1024	16.5	9	6
1512E	12.5	7.5	5.3
1524E	15	8.4	5.4
1512	13.5	8	5.8
1524	16.5	9	6
2012E	25	11.7	5.7
2012	28	12.7	5.8
2024E	24.5	11.5	5.7
2024	26.5	12.2	5.8
2048E	25	11.7	5.7
2048	28	12.7	5.8
3012E	50	20	6.5
3012	55	21.7	6.7
3024E	38.5	16.2	6.2
3024	46.5	18.9	6.4
3048E	45	18.4	6.4
3048	50	20	6.5
4012	44.5	18.2	6.4
4024E	48	19.4	6.5
4024	52.5	20.9	6.6
4048E	48	19.4	6.5
4048	55.5	21.9	6.7
5024E	62.5	24.2	7
5048E	68.5	26.2	7.2
6024E	76.8	29	7.4
6048E	80.7	30.3	7.6

Note: Model NO ending with “E” represents 230Vac output one, model NO without “E” represents 120Vac output one

For more detailed technical information, please contact the supplier.

When in the search sense mode, the green power LED will blink and the inverter will make a ticking sound. At full output voltage, the green power LED will light steadily and the inverter will make a steady humming sound. When the inverter is used as an “uninterruptible” power supply the search sense mode function should be defeated.

Exceptions

Some devices when scanned by the load sensor cannot be detected. Small fluorescent lights are the most

common example. (Try altering the plug polarity by turning the plug over.) Some computers and sophisticated electronics have power supplies that do not present a load until line voltage is available. When this occurs, each unit waits for the other to begin. To drive these loads either a small companion load must be used to bring the inverter out of its search mode, or the inverter may be programmed to remain at full output voltage.

2.5.8 Protections

The APC series inverter is equipped with extensive protections against various harsh situations/faults.

These protections include:

AC Input over voltage protection/AC Input low voltage protection

Low battery alarm/High battery alarm

Over temperature protection/Over load protection

Short Circuit protection (1s after fault)

Back feeding protection

When Over temperature /Over load occur, after the fault is cleared, the master switch has to be reset to restart the inverter.

The Low battery voltage trip point can be customized from defaulted value of 10VDC to 10.5VDC through the SW1 on the DIP switch.


The inverter will go to Over temp protection when the heat sink temp. $\geq 105\text{ }^{\circ}\text{C}$ ($221\text{ }^{\circ}\text{F}$), and will go to Fault (shutdown Output) after 30 seconds. After temp drop to $90\text{ }^{\circ}\text{C}$ ($194\text{ }^{\circ}\text{F}$), the switch has to be reset to activate the inverter.

The APC series Inverter is with back feeding protection which avoids presenting an AC voltage on the AC input terminal in Invert mode.

After the reason for fault is cleared, the inverter has to be reset to start working.

2.5.9 Remote control

Apart from the switch panel on the front of the inverter, an extra switch panel connected to the RJ11 port at the DC side of the inverter thru a standard telephone cable can also control the operation of the inverter.

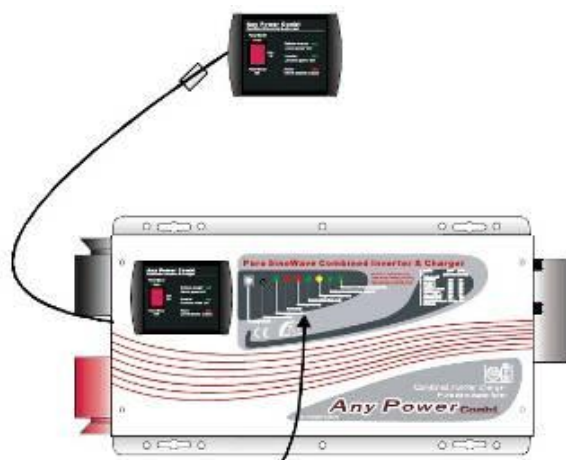

If an extra switch panel is connected to the inverter via “remote control port”, together with the panel on the inverter case, the two panels will be connected and operated in parallel.

Whichever first switches from “Off” to “Power saver off” or “Power saver on”, it will power the inverter on.

If the commands from the two panels conflict, the inverter will accept command according to the following priority:

Power saver on > Power saver off > Power off

Only when both panels are turned to “Unit Off” position, the inverter will be powered off.



WARNING

Never cut the telephone cable when the cable is attached to inverter and battery is connected to the inverter. Even the inverter is turned off, this will damage the remote PCB inside if the cable is short circuited during cutting.


2.5.10 LED Indicator & LCD

Pure SineWave Combined Inverter & Charger

WARNING: High internal voltage, Please read and understand instructions before operating or installing this unit. Other alarms explained in instructions.

BATT. TYPE & CHG. VOLTAGE	Position	Fast V	Float V
(*2 for 24v; *4 for 48v)			
0. Charge Off			
1. Gel U.S.A		14.0	13.7
2. A.G.M. 1		14.1	13.4
3. A.G.M. 2		14.6	13.7
4. Sealed Lead Acid		14.4	13.6
5. Gel European		14.4	13.8
6. Open lead acid		14.8	13.8
7. Calcium (open)		15.1	13.6
8. De Sulphation cycle	15.5 for	4 hrs	
9. Not used			

Above sticker is on APC/APS 1KW to 6KW models, and APV 1KW to 3KW models.

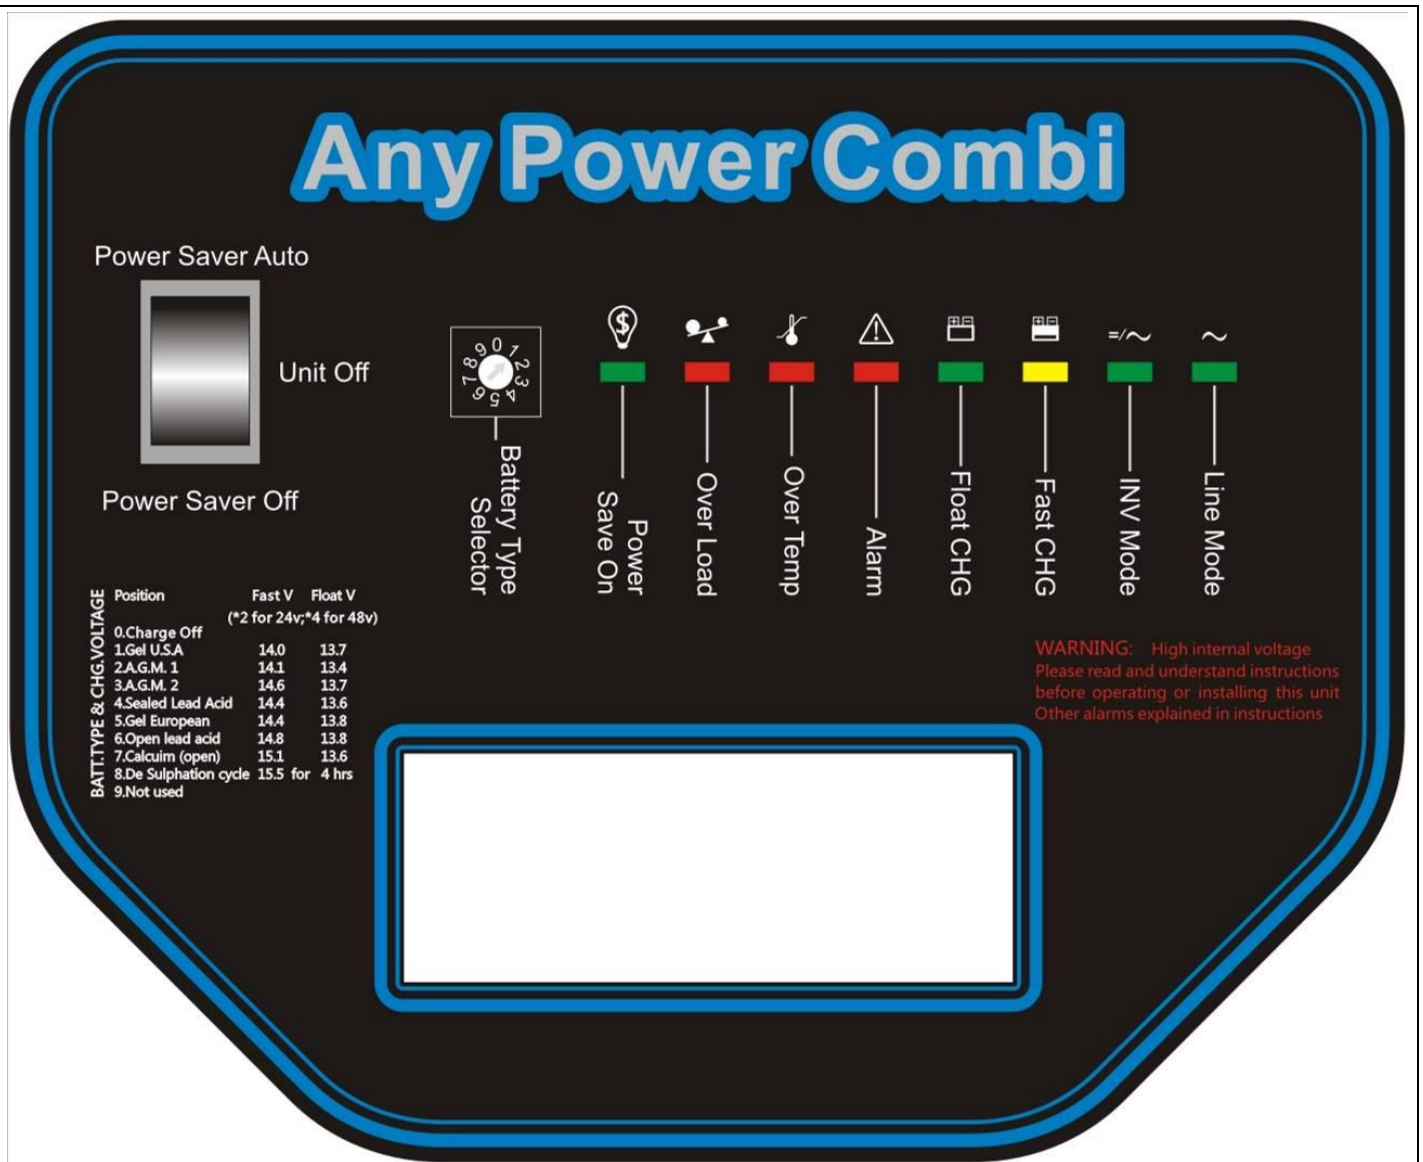

Above sticker is on APV 4-6KW models.

SHORE POWER ON	GREEN LED lighting on AC Mode
INVERTER ON	GREEN LED lighting on Inverter Mode
FAST CHARGE	Yellow LED lighting on Fast Charging Mode
FLOAT CHARGE	GREEN LED lighting on Float Charging Mode
OVER TEMP TRIP	RED LED lighting on Over Temperature
OVER LOAD TRIP	RED LED lighting on Over Load
POWER SAVER ON	GREEN LED lighting on Power Saver Mode (Power Saver Load \leq 25W)

The Inverter can be customized into LCD type. The LCD will display the following content:



Greeting message of "Welcome to "




AC Status & Input Voltage

“AC: abnormal” is displayed when AC input is not qualified.



Output Voltage/Frequency and Output Current(in percentage) in Inverter mode

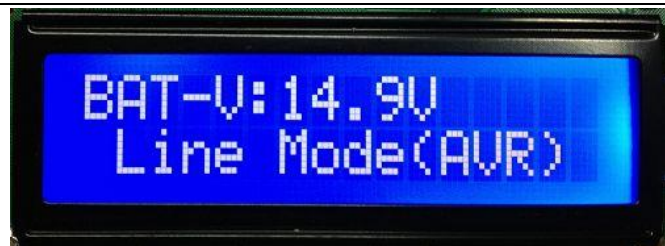

Battery voltage

Note:

When the inverter is in Battery Priority mode, “AC:abnormal” will also be displayed when the inverter finishes a complete charging circle and switches to inverter mode.

In AC mode, the LCD will not display the status of AC load.

2.5.11 Audible Alarm

Battery Voltage Low	Inverter green LED Lighting, and the buzzer beep 0.5s every 5s.
Battery Voltage High	Inverter green LED Lighting, and the buzzer beep 0.5s every 1s, and Fault after 60s.
Invert Mode Over-Load	(1)110% < load < 125% ($\pm 10\%$), No audible alarm in 14 minutes, Beeps 0.5s every 1s in 15 th minute and Fault after 15 minutes; (2)125% < load < 150% ($\pm 10\%$), Beeps 0.5s every 1s and Fault after 60s; (3)Load > 150% ($\pm 10\%$), Beeps 0.5s every 1s and Fault after 20s;
Over Temperature	Heat sink temp. $\geq 105^{\circ}\text{C}$ (221°F), Over temp red LED Lighting, beeps 0.5s every 1s;

2.5.12 FAN Operation

For 1-3KW, there is one multiple controlled DC fan which starts to work according to the following logics. For 4-6KW, there is one multiple controlled DC fan and one AC fan. The DC fan will work in the same way as the one on 1-3KW, while the AC fan will work once there is AC output from the inverter.

So when the inverter is in power saver mode, the AC fan will work from time to time in response to the pulse sent by the inverter in power saver mode.

The Operation of DC fan at the DC terminal side is controlled in the following logic:

Condition	Enter Condition	Leave condition	Speed
HEAT SINK TEMPERATURE	$T \leq 60^{\circ}\text{C} (140^{\circ}\text{F})$	$T > 65^{\circ}\text{C} (149^{\circ}\text{F})$	OFF
	$65^{\circ}\text{C} (149^{\circ}\text{F}) \leq T < 85^{\circ}\text{C} (185^{\circ}\text{F})$	$T \leq 60^{\circ}\text{C} (140^{\circ}\text{F})$ or $T \geq 85^{\circ}\text{C} (185^{\circ}\text{F})$	50%
	$T > 85^{\circ}\text{C} (185^{\circ}\text{F})$	$T \leq 80^{\circ}\text{C} (176^{\circ}\text{F})$	100%
CHARGER CURRENT	$I \leq 15\%$	$I \geq 20\%$	OFF
	$20\% < I \leq 50\% \text{Max}$	$I \leq 15\%$ or $I > 50\% \text{Max}$	50%
	$I > 50\% \text{Max}$	$I \leq 40\% \text{Max}$	100%
LOAD Percentage (INV MODE)	Load < 30%	Load \geq 30%	OFF
	$30\% \leq \text{Load} < 50\%$	Load \leq 20% or Load \geq 50%	50%
	Load \geq 50%	Load \leq 40%	100%

Allow at least 30CM of clearance around the inverter for air flow. Make sure that the air can circulate freely around the unit.

Fan noise level <60db at a distance of 1m

2.5.13 DIP Switches

On the DC end of inverter, there are 4 DIP switches which enable users to customize the performance of the device.

Switch NO	Switch Function	Position: 0	Position: 1
SW1	Low Battery Trip Volt	10.0VDC	10.5VDC
		*2 for 24VDC, *4 for 48VDC	
SW2(230V)	AC Input Range	184-253VAC	154-264VAC(40Hz+)
SW2(120V)	AC Input Range	100-135VAC	90-135VAC(40Hz+)
SW3	Load Sensing Cycle	30 seconds	3 seconds
SW4	Battery/AC Priority	Utility Priority	Battery Priority

Low Battery Trip Volt:

Deep discharge of the lead acid battery leads to high losses in capacity and early aging. In different applications, different low voltage disconnection level is preferred. For example, for solar application, user intended to have less DOD to prolong the battery cycle life. While for mobile application, users intend to have more DOD to reduce battery capacity and on board weight.

For 12VDC model, the Low Battery Trip Volt is set at 10.0VDC by default. It can be customized to 10.5VDC using SW1, this is to prevent batteries from over-discharging while there is only a small load applied on the inverter.

*2 for 24VDC, *4 for 48VDC

AC Input Range:

There are different acceptable AC input ranges for different kinds of loads.

For some relatively sensitive electronic devices, a narrow input range of 184-253VAC (100-135V for

120VAC model) is required to protect them.

While for some resistive loads which work in a wide voltage range, the input AC range can be customized to 154-253VAC (90-135V for 120VAC model), this helps to power loads with the most AC input power without frequent switches to the battery bank.

In order to make the inverter accept dirty power from a generator, when the SW2 is switched to position “1”, the inverter will bypass an AC input with a higher voltage(164-264Vac for 230Vac model) and wider frequency (40Hz plus for 50Hz/60Hz). Accordingly, the AC charger will also work in a higher voltage(174-254Vac for 230Vac model) wider freq range (43Hz plus for 50Hz/60Hz).

This will avoid frequent switches between battery and generator. But some sensitive loads will suffer from the low quality power.

The pros and cons should be clearly realized.

Load Sensing Cycle:

The inverter is factory defaulted to detect load for 250ms every 30 seconds. This cycle can be customized to 3 seconds through the SW3 on DIP switch.

AC/Battery Priority:

Our inverter is designed AC priority by default. This means, when AC input is present, the battery will be charged first, and the inverter will transfer the input AC to power the load. Only when the AC input is stable for a continuous period of 15 days will the inverter start a battery inverting cycle to protect the battery. After 1 normal charging cycle ac through put will be restored. For more info, pls refer to our manual at AC Charging Section.

The AC Priority and Battery Priority switch is SW4. When you choose battery priority, the inverter will invert from battery despite the AC input. Only when the battery voltage reaches the low voltage alarm point(10.5Vdc for 12Vdc, 21Vdc for 24Vdc, 42Vdc for 48Vdc) will the inverter transfer to AC Input, charge battery, and switch back to battery when the battery is fully charged. This function is mainly for wind/solar systems using utility power as back up.

The AC/Battery Priority function can be activated by sliding the switch even when the inverter is in operation.

Note: In battery priority mode, when qualified AC inputs for the first time, the inverter will only go into battery priority mode after a cycle of bulk charging and absorb charging is finished. The inverter will not go into float charging mode.

2.5.14 Other features

Battery voltage recovery start

After low battery voltage shut off(10V for 12V model or 20V for 24V model or 40V for 48V model), the inverter is able to restore to work after the battery voltage recovers to 13V/26V/52V(with power switch still in “On” position). This function helps to save the users extra labor to reactivate the inverter when the low battery voltage returns to acceptable range in renewable energy systems.



WARNING

Never leave the loads unattended, some loads (like a Heater) may cause accidents in such cases.

It is better to shut everything off after low voltage trip than to leave your load in the risk of fire. Nobody wants to return home, finding house surrounded by fire trucks, and naughty neighborhood kids toasting hot dogs against his house.

Auto Gen Start(optional)

The inverter can be customized to start up a generator when battery voltage goes low.

When the inverter goes to low battery alarm, it can send a signal to start a generator, and turn the generator off after battery charging is finished.

The auto gen start feature will only work with generators designed to work with this feature. There is an open/close relay that will short circuit the positive and negative cable from a generator. The input DC voltage can vary, but the Max current the relay can carry is 16Amp.

Conformal Coating

The entire line of inverters have been processed with a conformal coating on the PCB, making it water, rust, and dust resistant.

While these units are designed to withstand corrosion from the salty air, they are not splash proof.

3 Installation

3.1 Location

Follow all the local regulations to install the inverter.

Please install the equipment in a location of Dry, Clean, Cool with good ventilation.

Working temperature: - 10°C to 40°C (-14°F to 104°F)

Storage temperature: - 40°C to 70°C (-40°F to 158°F)

Relative Humidity: 0% to 95%, non-condensing

Cooling: Forced air

3.2 DC Wiring

It is suggested the battery bank be kept as close as possible to the inverter. The following table is a suggested wiring option for 1 meter DC cable.

Rate Current	DC cable	Model
200Amp Max	8AWG*2*2	1012/1024/1512/1524/2024/2048/3048
300Amp Max	8AWG*3*2	2012/3024/4024/4048/5048/6048
400Amp Max	8AWG*4*2	3012/5024/6024


Please find the following minimum wire size. In case of DC cable longer than 1m, please increase the cross section of cable to compensate for a drop in voltage and DC ripple.

Reducing RF interference

To reduce the effect of radiated interference, twist the DC cables. To further reduce RF interference, shield the cables with sheathing /copper foil / braiding.

Taping battery cables together to reduce inductance

Do not keep the battery cables far apart. In case it is not convenient to twist the cables, keep them taped together to reduce their inductance. Reduced inductance of the battery cables helps to reduce induced voltages. This reduces ripple in the battery cables and improves performance and efficiency.



 WARNING	The torque rating range for DC terminal is 12.5NM-20.5NM(9.25-15.19 pound-foot), and the suggested torque rating is 17NM(12.6 pound-foot). Over torquing may cause the bolt to break.
	In the event of reverse polarity the unit could be totally destroyed which is not covered under warranty!
	The inverter contains capacitors that may produce a spark when first connected to battery. Do not mount in a confined a battery or gas compartment.

3.3 AC Wiring

We recommend using 10 to 5Awg wire to connect to the ac terminal block.

When in AC mode the AC input power will supply both the loads and AC charger, a thicker wire gauge for AC Input is required. Pls consult a qualified electrician about the specific wire gauge required in terms of wire material and inverter power.


There are 3 different ways of connecting to the terminal block depending on the model. All the wirings are CE compliant, Call our tech support if you are not sure about how to wire any part of your inverter.
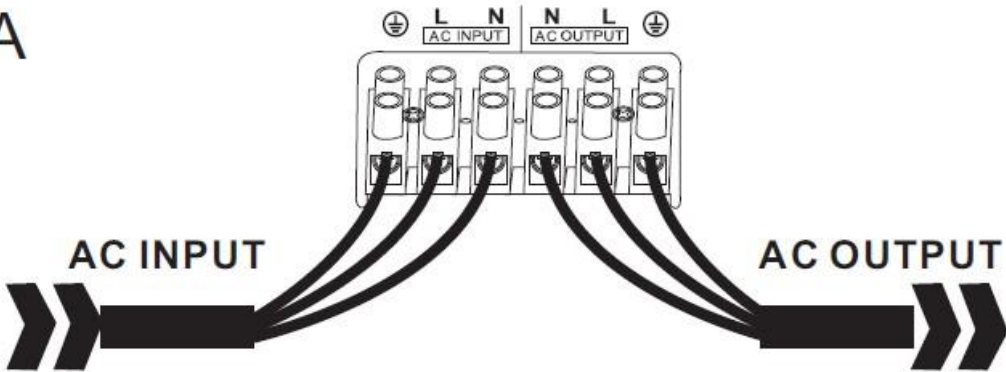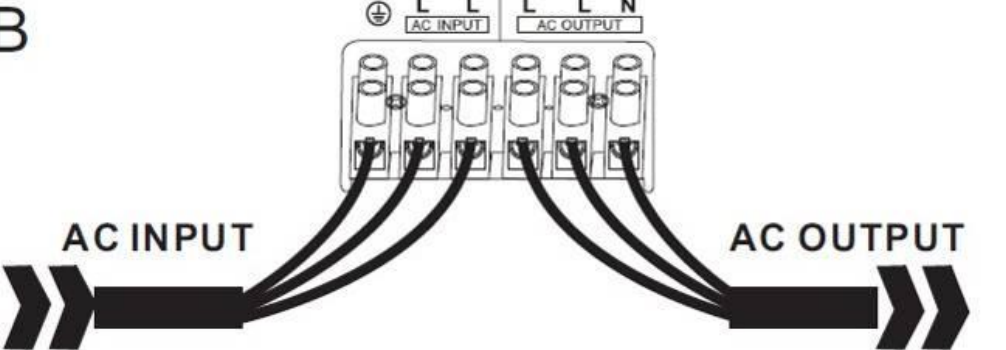
<p>Wiring Option 1</p> <p>230V single phase/120V single phase Input: Hot line+Neutral+Ground Output: Hot line+Neutral+Ground</p>	<p>A</p> 
<p>Wiring Option 2</p> <p>230V split phase Input: Hot line+ Hot line +Ground Output: Hot line+ Hot line +Neutral</p>	<p>B</p> 

Wiring Option 3

230V split phase
 Input: Hot line+ Hot line
 +Ground
 Output: Hot line
 +Neutral

Remark: In such cases,
 each output hotline can
 only carry a max of half
 the rated capacity.

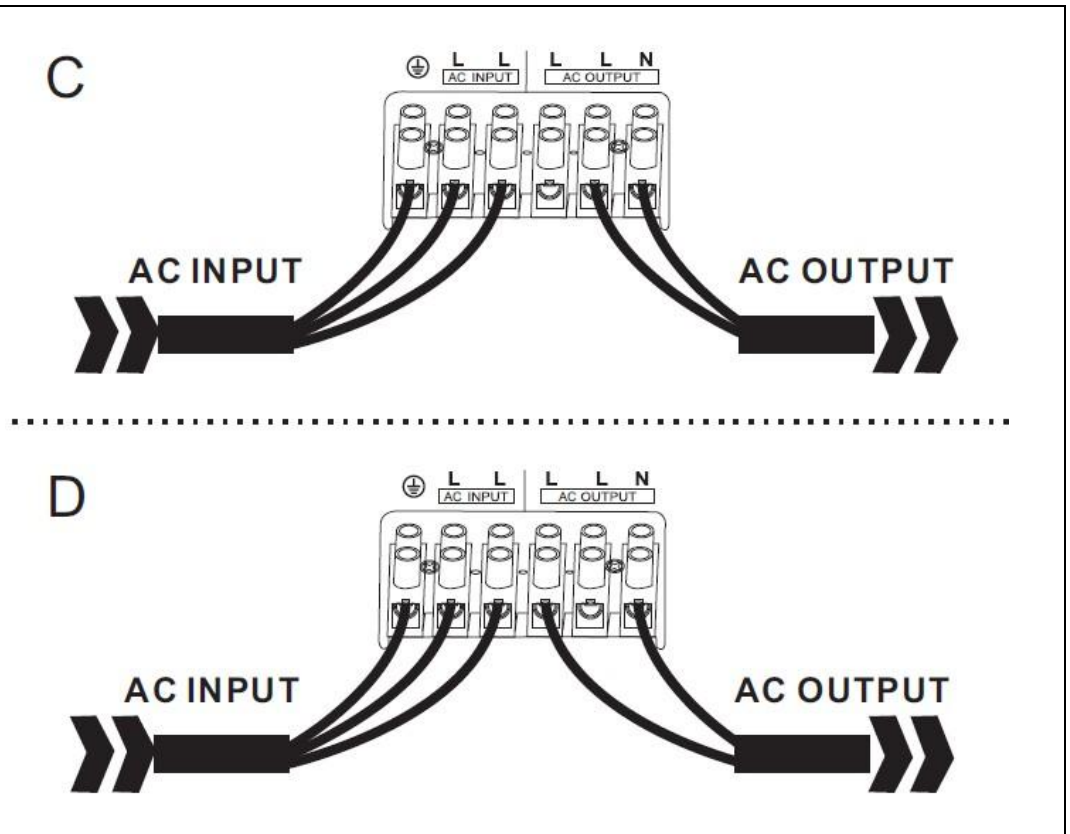**Caution:**

Wiring Option 2 and Wiring Option 3 are only allowed for split phase models.

Pls wire all the other models according to Wiring Option 1.

**WARNING**

For split phase models, AC input neutral is not required in wiring. Never Connect Input Neutral to Output Neutral. Damage will result which is not covered under warranty.

**WARNING**

The output voltage of this unit must never be connected in its input AC terminal, overload or damage may result.

Always switch on the inverter before plugging in any appliance.


3.4 Grounding

Connect an AWG 8 gauge or greater copper wire between the grounding terminal on the inverter and the earth grounding system or the vehicle chassis.

3.5 Install Flange

<p style="text-align: center;">Frame 1</p>	<p>APC1-1.5KW APS1-1.5KW</p>
<p style="text-align: center;">Frame 2</p>	<p>APC2-3KW APS2-3KW</p>
<p style="text-align: center;">Frame 3</p>	<p>APC4-6KW APS4-6KW APS1-3KW</p>

Side View

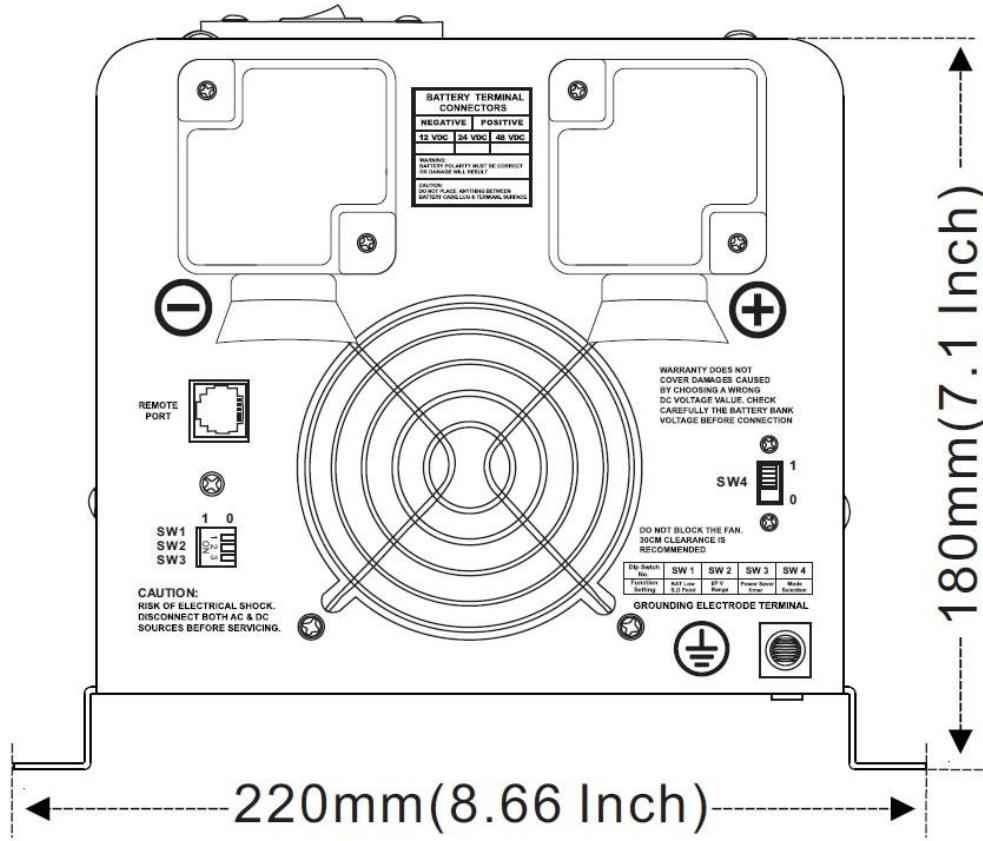

APV
4KW-6KW



4 Troubleshooting Guide

Troubleshooting contains information about how to troubleshoot possible error conditions while using the Any Power Combi Inverter & Charger.

The following chart is designed to help you quickly pinpoint the most common inverter failures.

Indicator and Buzzer

Status	Item	Indicator on top cover							LED on Remote Switch			Buzzer
		SHORE POWER ON	INVERTER ON	FAST CHG	FLOAT CHG	OVER TEMP TRIP	OVER LOAD TRIP	POWER SAVER ON	BATT CHG	INVERTER	Alarm	
Line Mode	CC	√	×	√	×	×	×	×	√	×	×	×
	CV	√	×	√, blink	×	×	×	×	√	×	×	×
	Float	√	×	×	√	×	×	×	√	×	×	×
	Standby	√	×	×	×	×	×	×	×	×	×	×
Inverter Mode	Inverter On	×	√	×	×	×	×	×	×	√	×	×
	Power Saver	×	×	×	×	×	×	√	×	×	×	×
Inverter Mode	Battery Low	×	√	×	×	×	×	×	×	√	√	Beep 0.5s every 5s
	Battery High	×	√	×	×	×	×	×	×	√	√	Beep 0.5s every 1s
	Overload On Invert Mode	×	√	×	×	×	√	×	×	√	√	Refer to “Audible alarm”
	Over-Temp On Invert Mode	×	√	×	×	√	×	×	×	√	√	Beep 0.5s every 1s
	Over-Temp On Line Mode	√	×	√	×	√	×	×	√	×	√	Beep 0.5s every 1s
	Over Charge	√	×	√	×	×	×	×	√	×	√	Beep 0.5s every 1s
Fault Mode	Fan Lock	×	×	×	×	×	×	×	×	×	×	Beep continuous
	Battery High	×	√	×	×	×	×	×	×	√	×	Beep continuous
	Inverter Mode Overload	×	×	×	×	×	√	×	×	×	×	Beep continuous
	Output Short	×	×	×	×	×	√	×	×	×	√	Beep continuous
	Over-Temp	×	×	×	×	√	×	×	×	×	×	Beep continuous
	Over	×	×	√	×	×	×	×	√	×	×	Beep

	Charge											continuous
	Back Feed Short	×	×	×	×	×	×	×	×	×	×	Beep continuous

Symptom	Possible Cause	Recommended Solution
Inverter will not turn on during initial power up.	Batteries are not connected, loose battery-side connections. Low battery voltage.	Check the batteries and cable connections. Check DC fuse and breaker. Charge the battery.
No AC output voltage and no indicator lights ON.	Inverter has been manually transitioned to OFF mode.	Press the switch to Power saver on or Power saver off position.
AC output voltage is low and the inverter turns loads OFF in a short time.	Low battery.	Check the condition of the batteries and recharge if possible.
Charger is inoperative and unit will not accept AC.	AC voltage has dropped out-of-tolerance	Check the AC voltage for proper voltage and frequency.
Charger is supplying a lower charge rate.	Charger controls are improperly set. Low AC input voltage. Loose battery or AC input connections.	Refer to the section on adjusting the “Charger Rate”. Source qualified AC power.. Check all DC /AC connections.
Charger turns OFF while charging from a generator.	High AC input voltages from the generator.	Load the generator down with a heavy load. Turn the generator output voltage down.
Sensitive loads turn off temporarily when transferring between grid and inverting.	Inverter's Low voltage trip voltage may be too low to sustain certain loads.	Choose narrow AC voltage in the DIP switch, or Install a UPS if possible.
Noise from Transformer/case*	Applying specific loads such as hair drier	Remove the loads

***The reason for the noise from transformer and/or case**

When in inverter mode and the transformer and/or case of the inverter sometimes may vibrate and make noise.

The noise may come from transformer.

According to the characteristics of our inverter, there is one type of load which will most likely to cause rattles of transformer, that is a half-wave load, load that uses only a half cycle of the power(see figure 1).

This trends to cause imbalance of magnetic field of transformer, reducing its rated working freq from 20KHz to, say, maybe 15KHz (it varies according to different loads). This way, the freq of noise falls exactly into the range (200Hz-20KHz) that human ear can sense.

The most common load of such kind is hair drier.

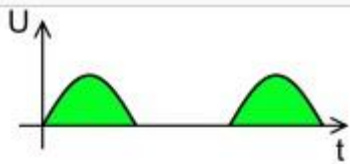


Figure 1

If the noise comes from case.

Normally when loaded with inductive loads, the magnetic field generated by transformer keeps attracting or releasing the steel case at a specific freq, this may also cause noise.

Reducing the load power or using an inverter with bigger capacity will normally solve this problem.

The noise willn't do any harm to the inverter or the loads.

5 Warranty

We offer 1 year limited warranty.

But the following cases are not covered under warranty.

1 DC polarity reverse.

The inverter is designed without DC polarity reverse protection. A polarity reverse may severely damage the inverter.

2 Wrong AC wiring

3 Operation in a condensing environment.

4 Operating with an undersized generator or generator with unqualified wave form.

Appendix 1

APC Series Inverter&Charger

Electrical Specifications

	Model	APC 1KW	APC 1.5KW	APC 2KW	APC 3KW	APC 4KW	APC 5KW	APC 6KW
Inverter Output	Continuous Output Power	1000W	1500W	2000W	3000W	4000W	5000W	6000W
	Surge Rating(20s)	3000W	4500W	6000W	9000W	12000W	15000W	18000W
	Capable of Starting Electric Motor	1HP	1.5HP	2HP	3HP	4HP	5HP	6HP
	Output Waveform	Pure Sine wave/Same as input(Bypass mode)						
	Nominal Efficiency	>88%(Peak)						
	Line Mode Efficiency	>95%						
	Power Factor	0.9-1.0						
	Nominal Output Voltage rms	100-110-120Vac / 220-230-240Vac						
	Output Voltage Regulation	±10% RMS						
	Output Frequency	50/60Hz ±0.3Hz						
	Short Circuit Protection	Yes, Current Limit Function (Fault after 1sec)						
	Typical transfer Time	10ms(Max)						
THD	< 10%							
DC Input	Nominal Input Voltage	12.0Vdc (*2 for 24Vdc, *4 for 48Vdc)						
	Minimum Start Voltage	10.0Vdc						
	Low Battery Alarm	10.5Vdc / 11.0Vdc						
	Low Battery Trip	10.0Vdc / 10.5Vdc						
	High Voltage Alarm & Fault	16.0Vdc						
	High DC Input Recovery	15.5Vdc						
	Low Battery voltage recover	13.0Vdc						
	Idle Consumption-Search Mode	< 25 W when Power Saver On						
Charge	Input Voltage Range	Narrow: 100~135VAC / 194~243VAC; Wide: 90~135VAC / 164~243VAC;						
	Input Frequency Range	Narrow: 47-55±0.3Hz for 50Hz, 57-65±0.3Hz for 60Hz Wide:43±0.3Hz plus for 50Hz/60Hz						
	Output Voltage	Depends on battery type						
	Charger Breaker Rating	10A	10A	10A	20A	20A	30A	30A
	Max Charge Rate	15A to 85A ±5A , depending on models						
	Over Charge Protection Shutdown	15.7V for 12Vdc (*2 for 24Vdc, *4 for 48Vdc)						

	Battery type	Fast Vdc				Float Vdc		
	Gel U.S.A	14.0				13.7		
	A.G.M 1	14.1				13.4		
	A.G.M 2	14.6				13.7		
	Sealed Lead Acid	14.4				13.6		
	Gel Euro	14.4				13.8		
	Open Lead Acid	14.8				13.3		
	Calcium	15.1				13.6		
	De-sulphation	15.5 for 4hrs						
	Remote Control	Yes. Optional						
Bypass & Protection	Input Voltage Waveform	Sine wave (Grid or Generator)						
	Nominal Voltage	120Vac				230Vac		
	Low Voltage Trip	80V/90V \pm 4%				184V/154V \pm 4%		
	Low Voltage re engage	90V/100V \pm 4%				194V/164V \pm 4%		
	High Voltage Trip	140V \pm 4%				253V \pm 4%		
	High Voltage re engage	135V \pm 4%				243V \pm 4%		
	Max Input AC Voltage	150VAC				270VAC		
	Nominal Input Frequency	50Hz or 60Hz (Auto detect)						
	Low Freq Trip	Narrow: 47 \pm 0.3Hz for 50Hz, 57 \pm 0.3Hz for 60Hz Wide: 40 \pm 0.3Hz for 50Hz/60Hz						
	Low Freq re engage	Narrow: 48 \pm 0.3Hz for 50Hz, 58 \pm 0.3Hz for 60Hz Wide: 45 \pm 0.3Hz for 50Hz/60Hz						
	High Freq Trip	Narrow: 55 \pm 0.3Hz for 50Hz, 65 \pm 0.3Hz for 60Hz Wide: No up limit for 50Hz/60Hz						
	High Freq re engage	Narrow: 54 \pm 0.3Hz for 50Hz, 64 \pm 0.3Hz for 60Hz Wide: No up limit for 50Hz/60Hz						
	Output Short circuit protection	Circuit breaker						
	Bypass breaker rating	10A	15A	20A	30A	30A	40A	40A
Transfer switch rating	30amp for UL & TUV				40amp for UL			
Max bypass current	30amp				40amp			
Mechanical Specification	Mounting	Wall mount						
	Inverter Dimensions(L*W*H)	382*218*179mm		442*218*179mm		598*218*179mm		
	Inverter Weight	16KG	17KG	20KG	24KG	35KG	45KG	45KG
	Shipping Dimensions(L*W*H)	520*315*300mm		580*315*300mm		740*315*300mm		
	Shipping Weight	18KG	19KG	22KG	26KG	37KG	47KG	47KG
	Display	Status LEDs / Status LEDs+LCD						
	Standard Warranty	1 Year						

APS Series Inverter & Charger & AVR

Electrical Specifications

	Model	APS 1KW	APS 1.5KW	APS 2KW	APS 3KW	APS 4KW	APS 5KW	APS 6KW	
Inverter Output	Continuous Output Power	1000W	1500W	2000W	3000W	4000W	5000W	6000W	
	Surge Rating(20s)	3000W	4500W	6000W	9000W	12000W	15000W	18000W	
	Capable of Starting Electric Motor	1HP	1.5HP	2HP	3HP	4HP	5HP	6HP	
	Output Waveform	Pure Sine wave/Same as input(Bypass mode)							
	Nominal Efficiency	>88%(Peak)							
	Line Mode Efficiency	>95%							
	Power Factor	0.9-1.0							
	Nominal Output Voltage rms	100-110-120Vac / 220-230-240Vac							
	Output Voltage Regulation	±10% RMS							
	Output Frequency	50/60Hz ±0.3Hz							
	Short Circuit Protection	Yes, Current Limit Function (Fault after 1sec)							
	Typical transfer Time	10ms(Max)							
THD	< 10%								
DC Input	Nominal Input Voltage	12.0Vdc (*2 for 24Vdc, *4 for 48Vdc)							
	Minimum Start Voltage	10.0Vdc							
	Low Battery Alarm	10.5Vdc / 11.0Vdc							
	Low Battery Trip	10.0Vdc / 10.5Vdc							
	High Voltage Alarm & Fault	16.0Vdc							
	High DC Input Recovery	15.5Vdc							
	Low Battery Voltage Recover	13.0Vdc							
	Idle Consumption-Search Mode	< 25 W when Power Saver On							
Charge	Input Voltage Range	Narrow: 100~135VAC / 194~243VAC; Wide: 90~135VAC / 164~243VAC;							
	Input Frequency Range	Narrow: 47-55±0.3Hz for 50Hz, 57-65±0.3Hz for 60Hz Wide:43±0.3Hz plus for 50Hz/60Hz							
	Output Voltage	Depends on battery type							
	Charger Breaker Rating	10A	10A	10A	20A	20A	30A	30A	
	Max Charge Rate	15A to 85A ±5A , depending on models							
	Over Charge Protection Shutdown	15.7V for 12Vdc (*2 for 24Vdc, *4 for 48Vdc)							
	Battery type	Fast Vdc				Float Vdc			
	Gel U.S.A	14.0				13.7			

	A.G.M 1	14.1				13.4		
	A.G.M 2	14.6				13.7		
	Sealed Lead Acid	14.4				13.6		
	Gel Euro	14.4				13.8		
	Open Lead Acid	14.8				13.3		
	Calcium	15.1				13.6		
	De-sulphation	15.5 for 4hrs						
	Remote Control	Yes. Optional						
Bypass & Protection	Input Voltage Waveform	Sine wave (Grid or Generator)						
	Nominal Voltage	120Vac				230Vac		
	Low Voltage Trip	80V/90V \pm 4%				184V/154V \pm 4%		
	Low Voltage re engage	90V/100V \pm 4%				194V/164V \pm 4%		
	High Voltage Trip	140V \pm 4%				253V \pm 4%		
	High Voltage re engage	135V \pm 4%				243V \pm 4%		
	Max Input AC Voltage	150VAC				270VAC		
	Nominal Input Frequency	50Hz or 60Hz (Auto detect)						
	Low Freq Trip	Narrow: 47 \pm 0.3Hz for 50Hz, 57 \pm 0.3Hz for 60Hz Wide: 40 \pm 0.3Hz for 50Hz/60Hz						
	Low Freq re engage	Narrow: 48 \pm 0.3Hz for 50Hz, 58 \pm 0.3Hz for 60Hz Wide: 45 \pm 0.3Hz for 50Hz/60Hz						
	High Freq Trip	Narrow: 55 \pm 0.3Hz for 50Hz, 65 \pm 0.3Hz for 60Hz Wide: No up limit for 50Hz/60Hz						
	High Freq re engage	Narrow: 54 \pm 0.3Hz for 50Hz, 64 \pm 0.3Hz for 60Hz Wide: No up limit for 50Hz/60Hz						
	Output Short circuit protection	Circuit breaker						
	Bypass breaker rating	10A	15A	20A	30A	30A	40A	40A
Transfer switch rating	30amp for UL & TUV				40amp for UL			
Max bypass current	30amp				40amp			
AVR Function	Input AC Voltage Range	90-140V \pm 4%				154-253V \pm 4%		
	Stabilized Output Voltage	120VAC \pm 10% rms				230VAC \pm 10% rms		
	Nominal Voltage	110Vac	120Vac	220Vac	230Vac	240Vac		
	(A) Line Low loss N/W (On Battery)	84/72	92/78	168/143	176/150	183/156		
	(B) Line Low comeback N/W (On Boost)	89/77	97/83	178/153	186/160	193/166		
	(C) Line 2nd boost threshold (On Boost)	**	**	**	**	**		
	(D) Line 2nd boost comeback (On Boost)	**	**	**	**	**		
	(E) Line 1st boost threshold (On Boost)	99	108	198	207	216		
	(F) Line 1st boost comeback (On Normal)	103	112	205	215	225		
	(G) Line buck comeback (On Normal)	118	128	235	246	256		

	(H) Line buck threshold (On Buck)	121	132	242	253	264		
	(I) Line high comeback (On Buck)	127	139	253	266	278		
	(J) Line high loss (On Battery)	132	144	263	276	288		
Mechanical Specification	Mounting	Wall mount						
	Inverter Dimensions(L*W*H)	382*218*179mm	442*218*179mm	598*218*179mm				
	Inverter Weight	16KG	17KG	20KG	24KG	35KG	45KG	45KG
	Shipping Dimensions(L*W*H)	520*315*300mm	580*315*300mm	740*315*300mm				
	Shipping Weight	18KG	19KG	22KG	26KG	37KG	47KG	47KG
	Display	Status LEDs / Status LEDs+LCD						
	Standard Warranty	1 Year						

APV Series Inverter & Solar Charger

Electrical Specifications

	Model	APV 1KW	APV 1.5KW	APV 2KW	APV 3KW	APV 4KW	APV 5KW	APV 6KW	
Inverter Output	Continuous Output Power	1000W	1500W	2000W	3000W	4000W	5000W	6000W	
	Surge Rating(20s)	3000W	4500W	6000W	9000W	12000W	15000W	18000W	
	Capable of Starting Electric Motor	1HP	1.5HP	2HP	3HP	4HP	5HP	6HP	
	Output Waveform	Pure Sine wave/Same as input(Bypass mode)							
	Nominal Efficiency	>88%(Peak)							
	Line Mode Efficiency	>95%							
	Power Factor	0.9-1.0							
	Nominal Output Voltage rms	100-110-120Vac / 220-230-240Vac							
	Output Voltage Regulation	±10% RMS							
	Output Frequency	50/60Hz ±0.3Hz							
	Short Circuit Protection	Yes, Current Limit Function (Fault after 1sec)							
	Typical transfer Time	10ms(Max)							
THD	< 10%								
DC Input	Nominal Input Voltage	12.0Vdc (*2 for 24Vdc, *4 for 48Vdc)							
	Minimum Start Voltage	10.0Vdc							
	Low Battery Alarm	10.5Vdc / 11.0Vdc							
	Low Battery Trip	10.0Vdc / 10.5Vdc							
	High Voltage Alarm & Fault	16.0Vdc							
	High DC Input Recovery	15.5Vdc							
	Low Battery Voltage Recover	13.0Vdc							
	Idle Consumption-Search Mode	< 25 W when Power Saver On							
Charge	Input Voltage Range	Narrow: 100~135VAC / 194~243VAC; Wide: 90~135VAC / 164~243VAC;							
	Input Frequency Range	Narrow: 47-55±0.3Hz for 50Hz, 57-65±0.3Hz for 60Hz Wide:43±0.3Hz plus for 50Hz/60Hz							
	Output Voltage	Depends on battery type							
	Charger Breaker Rating	10A	10A	10A	20A	20A	30A	30A	
	Max Charge Rate	15A to 85A ±5A , depending on models							
	Over Charge Protection Shutdown	15.7V for 12Vdc (*2 for 24Vdc, *4 for 48Vdc)							
	Battery type	Fast Vdc				Float Vdc			
	Gel U.S.A	14.0				13.7			
	A.G.M 1	14.1				13.4			
	A.G.M 2	14.6				13.7			
	Sealed Lead Acid	14.4				13.6			
	Gel Euro	14.4				13.8			
	Open Lead Acid	14.8				13.3			
Calcium	15.1				13.6				

	De-sulphation	15.5 for 4hrs								
	Remote Control	Yes. Optional								
Bypass & Protection	Input Voltage Waveform	Sine wave (Grid or Generator)								
	Nominal Voltage	120Vac				230Vac				
	Low Voltage Trip	80V/90V \pm 4%				184V/154V \pm 4%				
	Low Voltage re engage	90V/100V \pm 4%				194V/164V \pm 4%				
	High Voltage Trip	140V \pm 4%				253V \pm 4%				
	High Voltage re engage	135V \pm 4%				243V \pm 4%				
	Max Input AC Voltage	150VAC				270VAC				
	Nominal Input Frequency	50Hz or 60Hz (Auto detect)								
	Low Freq Trip	Narrow: 47 \pm 0.3Hz for 50Hz, 57 \pm 0.3Hz for 60Hz Wide: 40 \pm 0.3Hz for 50Hz/60Hz								
	Low Freq re engage	Narrow: 48 \pm 0.3Hz for 50Hz, 58 \pm 0.3Hz for 60Hz Wide: 45 \pm 0.3Hz for 50Hz/60Hz								
	High Freq Trip	Narrow: 55 \pm 0.3Hz for 50Hz, 65 \pm 0.3Hz for 60Hz Wide: No up limit for 50Hz/60Hz								
	High Freq re engage	Narrow: 54 \pm 0.3Hz for 50Hz, 64 \pm 0.3Hz for 60Hz Wide: No up limit for 50Hz/60Hz								
	Output Short circuit protection	Circuit breaker								
	Bypass breaker rating	10A	15A	20A	30A	30A	40A	40A		
	Transfer switch rating	30amp for UL & TUV				40amp for UL				
Max bypass current	30amp				40amp					
Solar Charger	Rated Voltage	12V/24V								
	Rated Charge Current	60A								
	Rated Output Current	15A								
	Self Consumption	< 10mA								
	Bulk Charge	14.5V(default)				(*2 for 24Vdc)				
	Floating Charge	13.5V(default)								
	Equalization Charge	14.0V(default)								
	Over Charge Disconnection	14.8V								
	Over Charge Recovery	13.6V								
	Over Discharge Disconnection	10.8 V(default)								
	Over Discharge Reconnection	12.3V								
	Temperature Compensation	- 13.2mV/ $^{\circ}$ C								
Ambient Temperature	0-40 $^{\circ}$ C (full load) 40—60 $^{\circ}$ C (derating)									
Mechanical Specifications	Mounting	Wall mount								
	Inverter Dimensions(L*W*H)	598*218*179mm				470*190*340mm				
	Inverter Weight	21KG	22kg	23KG	27KG	38KG	48KG	49KG		
	Shipping Dimensions(L*W*H)	740*315*300mm				530*240*390mm				
	Shipping Weight	23KG	24kg	25KG	29KG	40KG	50KG	51KG		
	Display	Status LEDs / Status LEDs+LCD								
	Standard Warranty	1 Year								

※Specifications in this manual are subject to change without prior notice.